



PS WALL PANEL

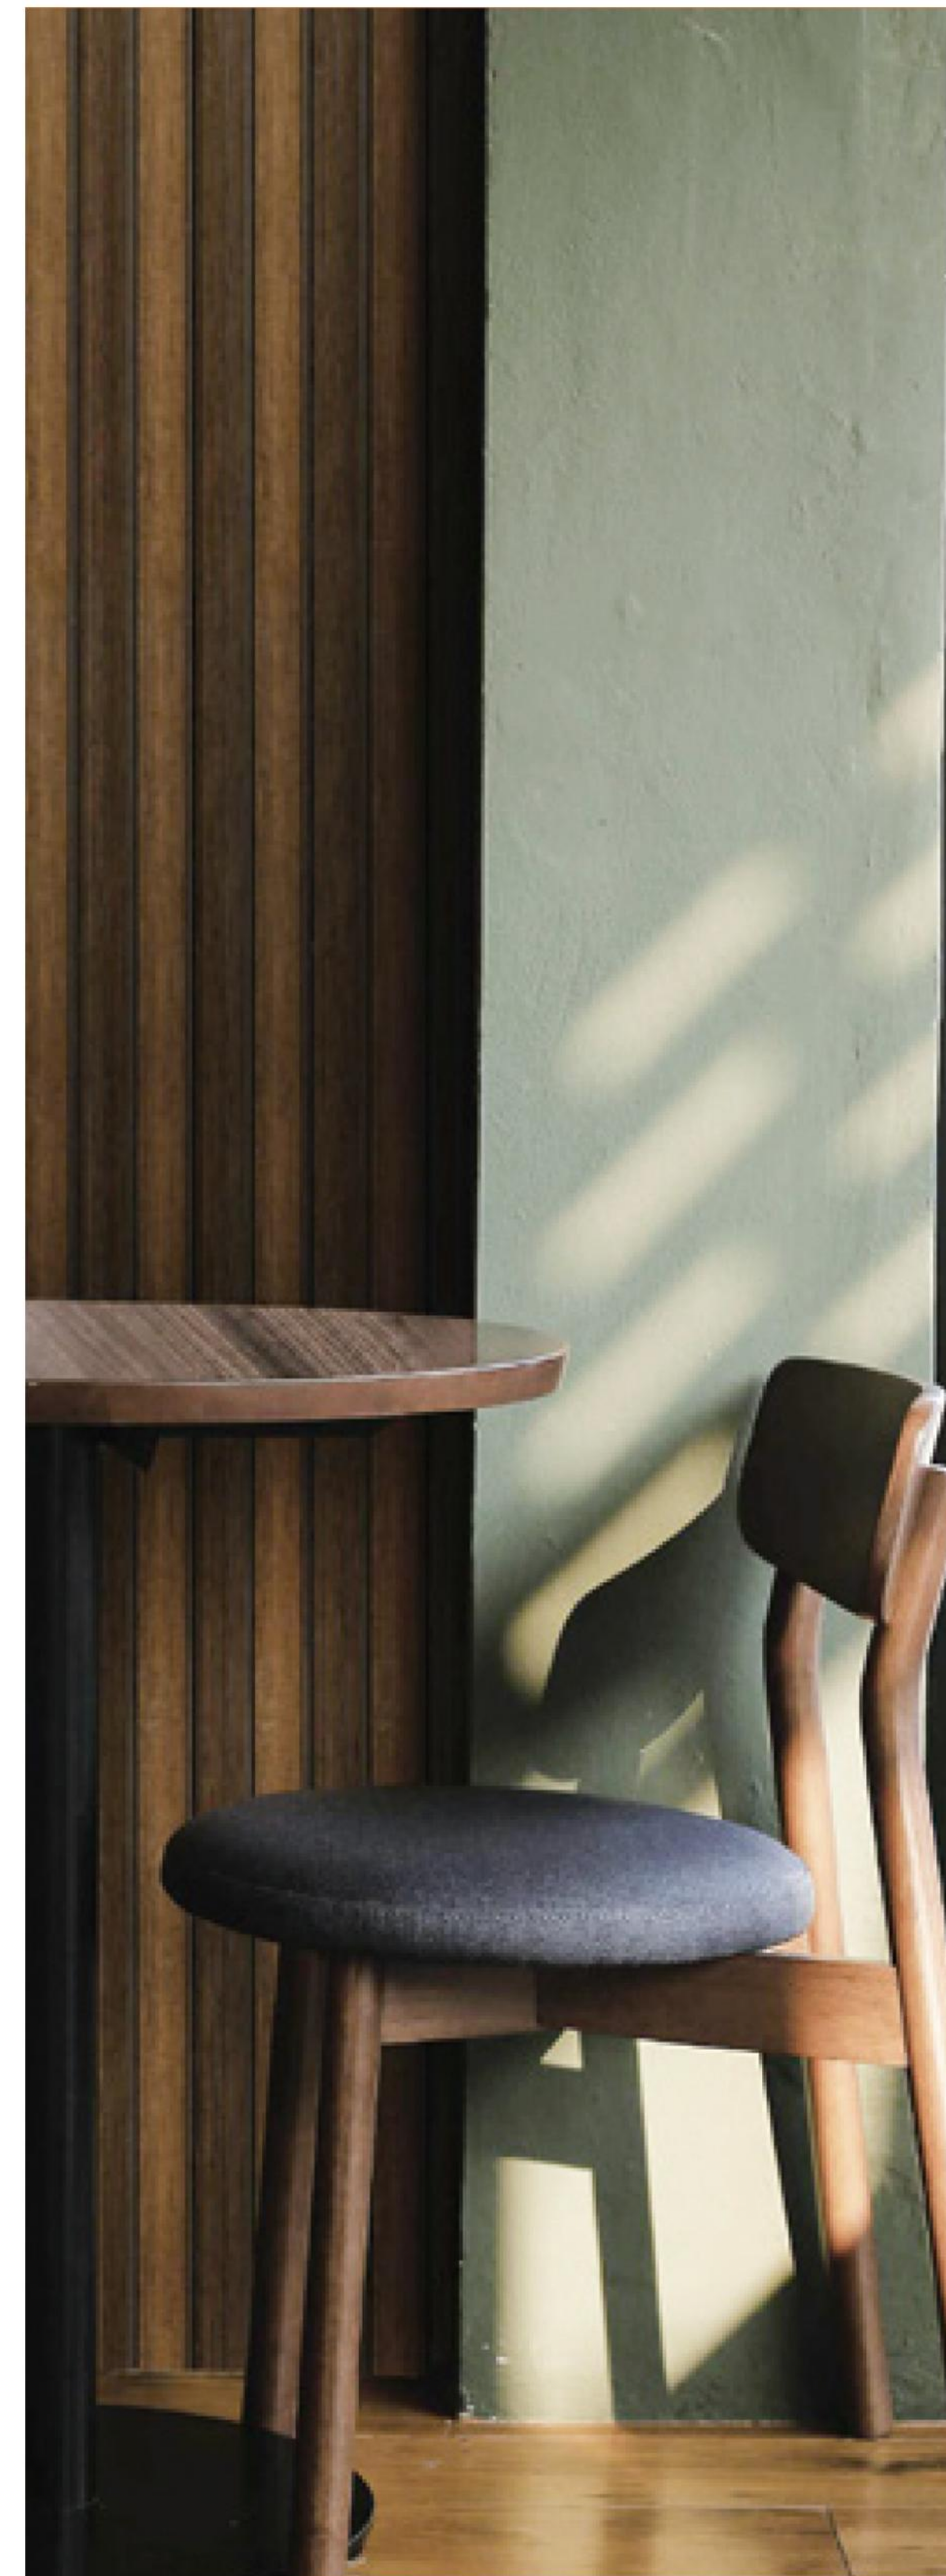

AesthEdge



+8618953955575



angela@aesthedge.com




www.aesthedge.com



Rm1103, A10Building,Lushang Center,Guangzhou Road,
Lanshan District,Linyi City,Shandong Province,China


CSW M01

W 160mm
H 14mm
L 2900mm

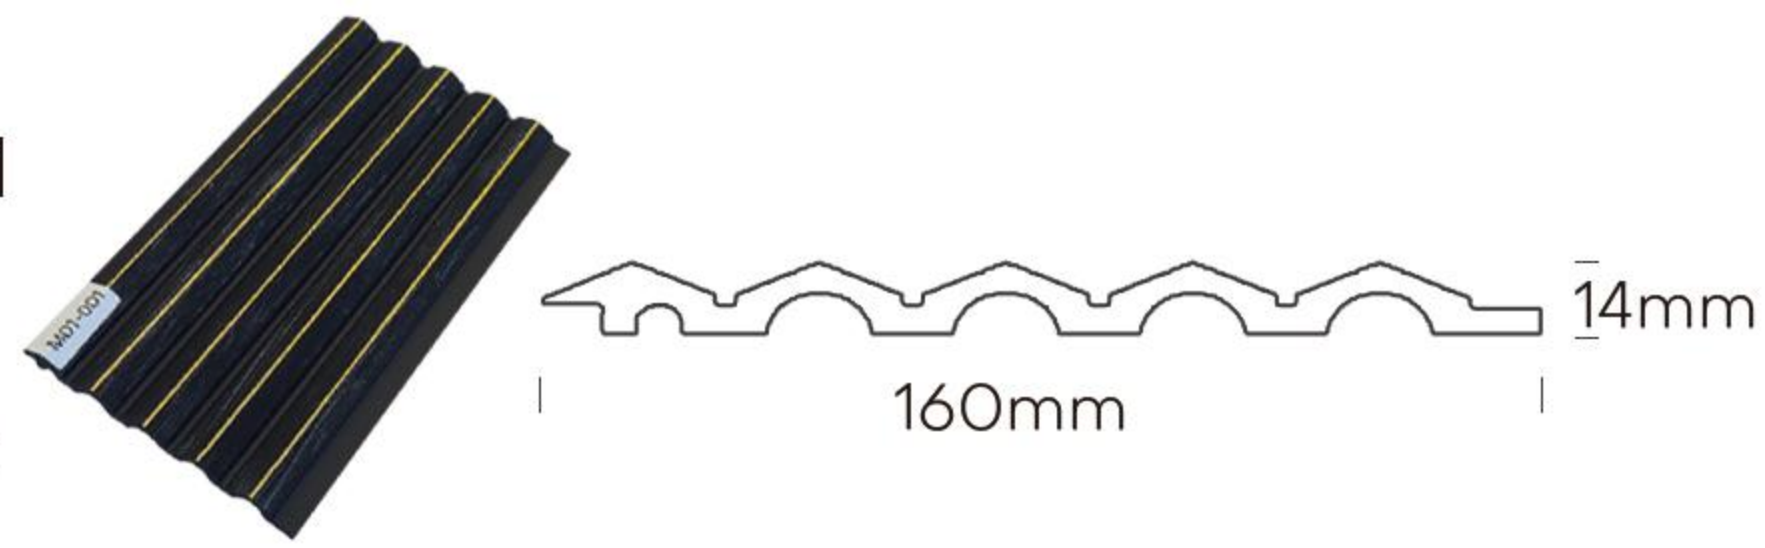


CSW M09

W 150mm
H 12mm
L 2900mm

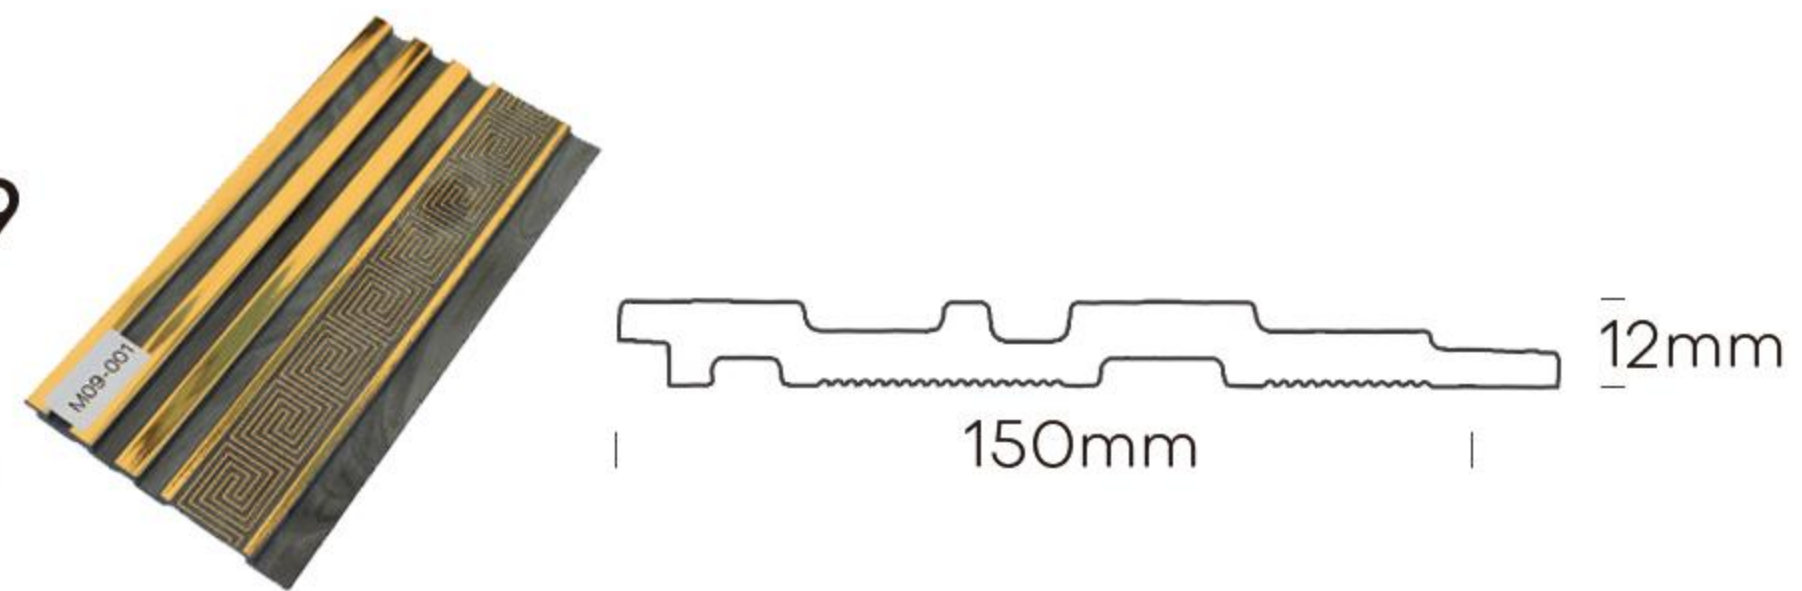


CSW M02

W 120mm
H 12mm
L 2900mm

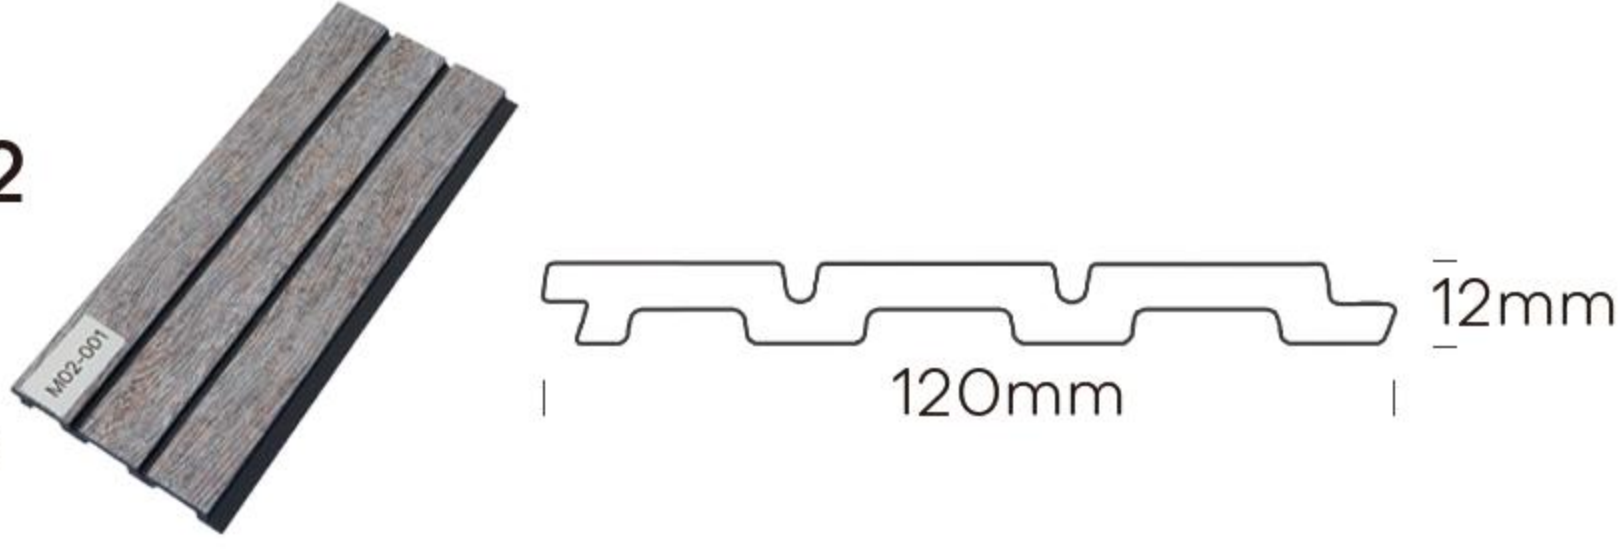


CSW M10

W 160mm
H 12mm
L 2900mm

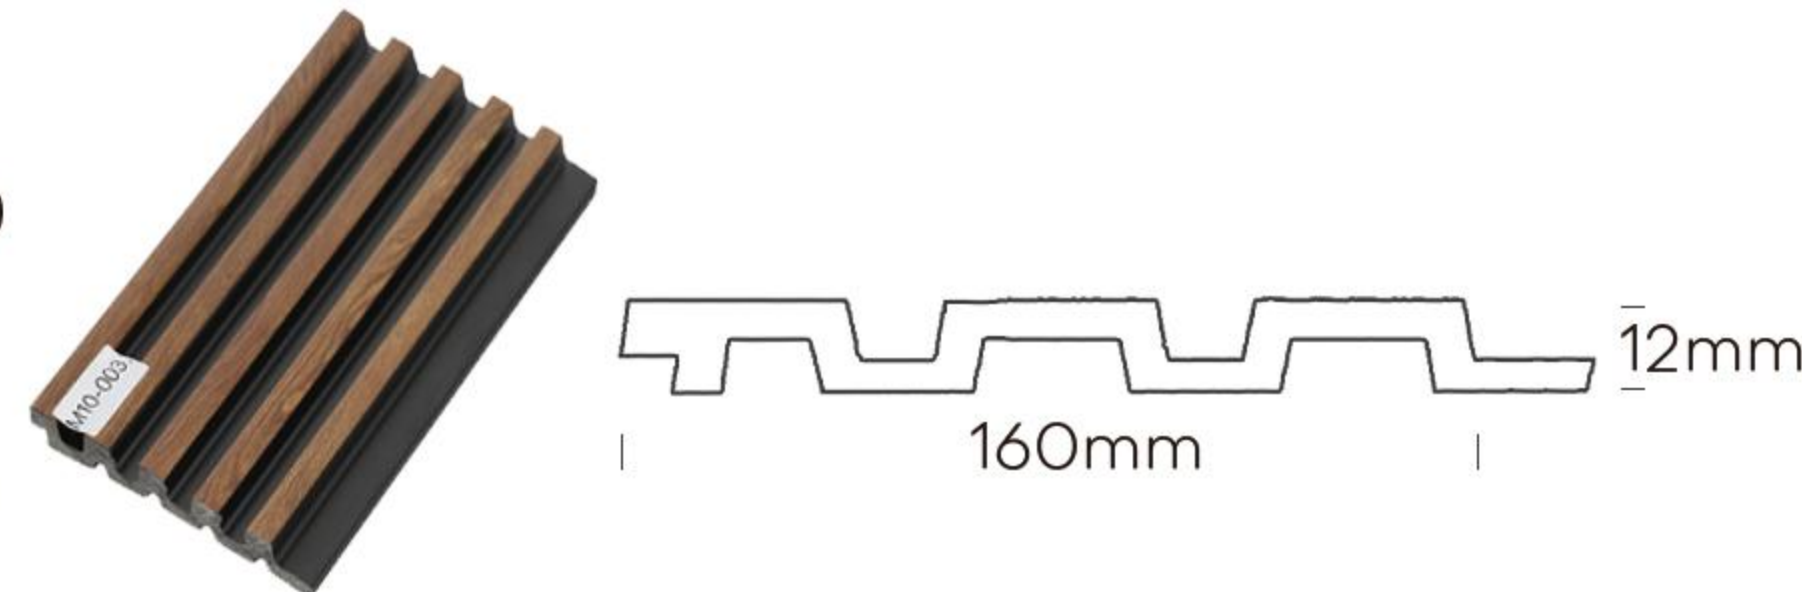


CSW M03

W 120mm
H 12mm
L 2900mm

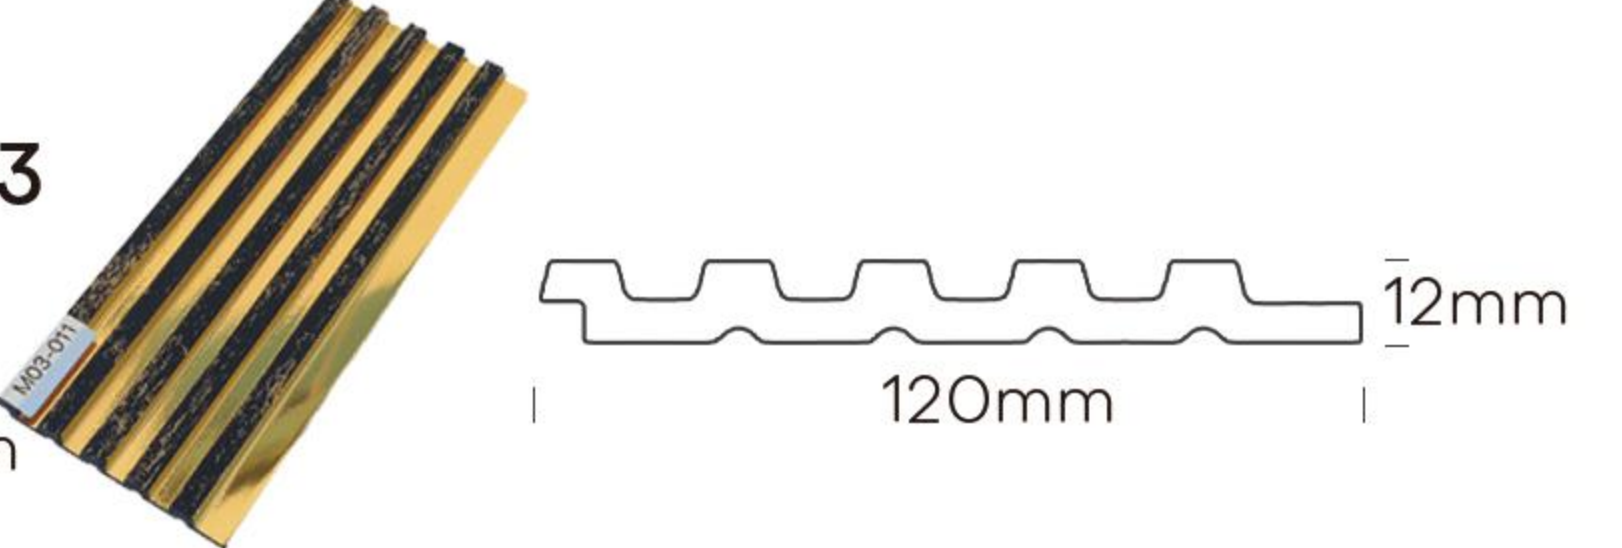


CSW M11

W 120mm
H 12mm
L 2900mm

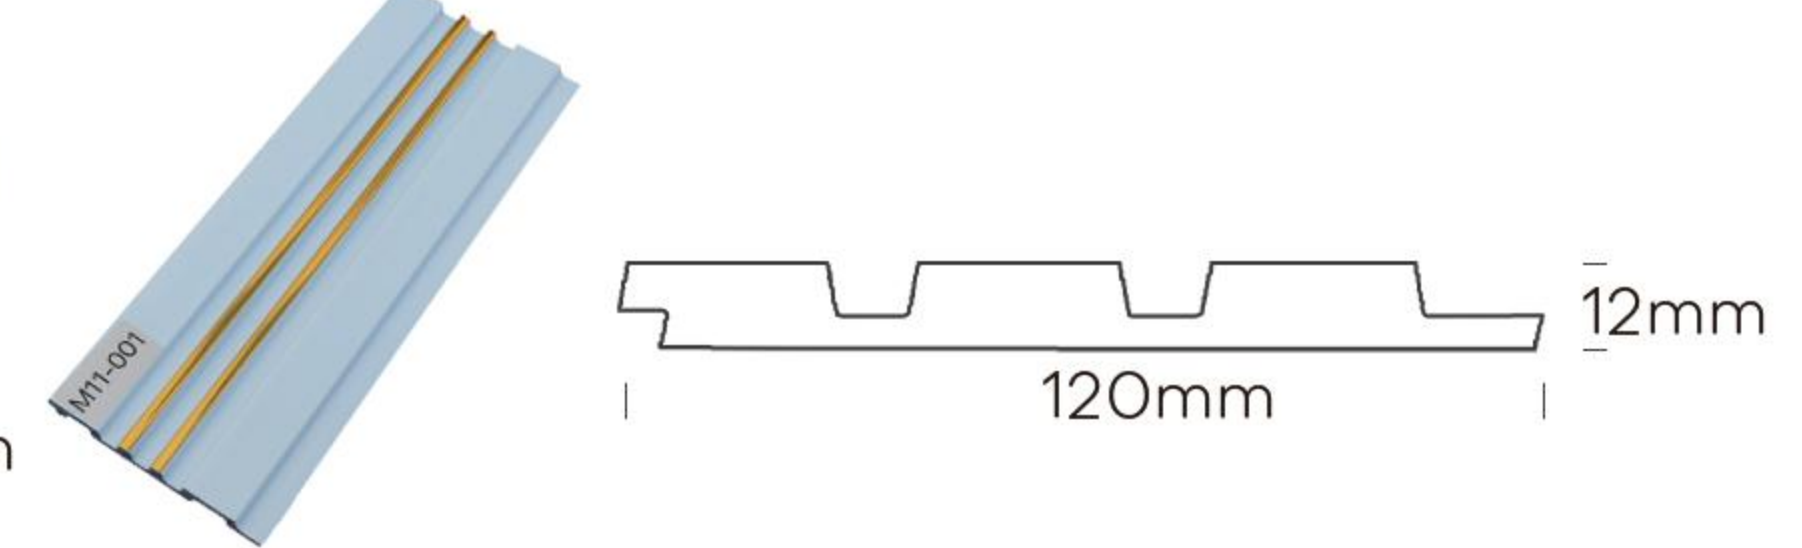


CSW M04

W 150mm
H 10mm
L 2900mm

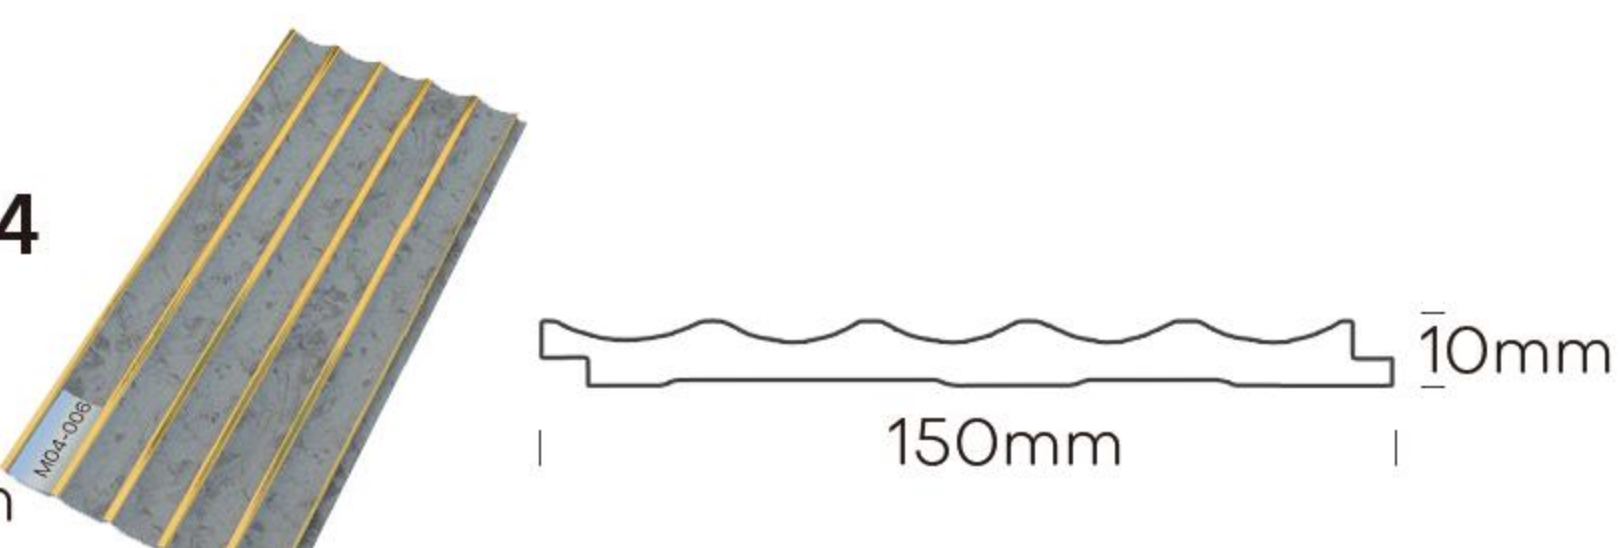


CSW M12

W 120mm
H 12mm
L 2900mm

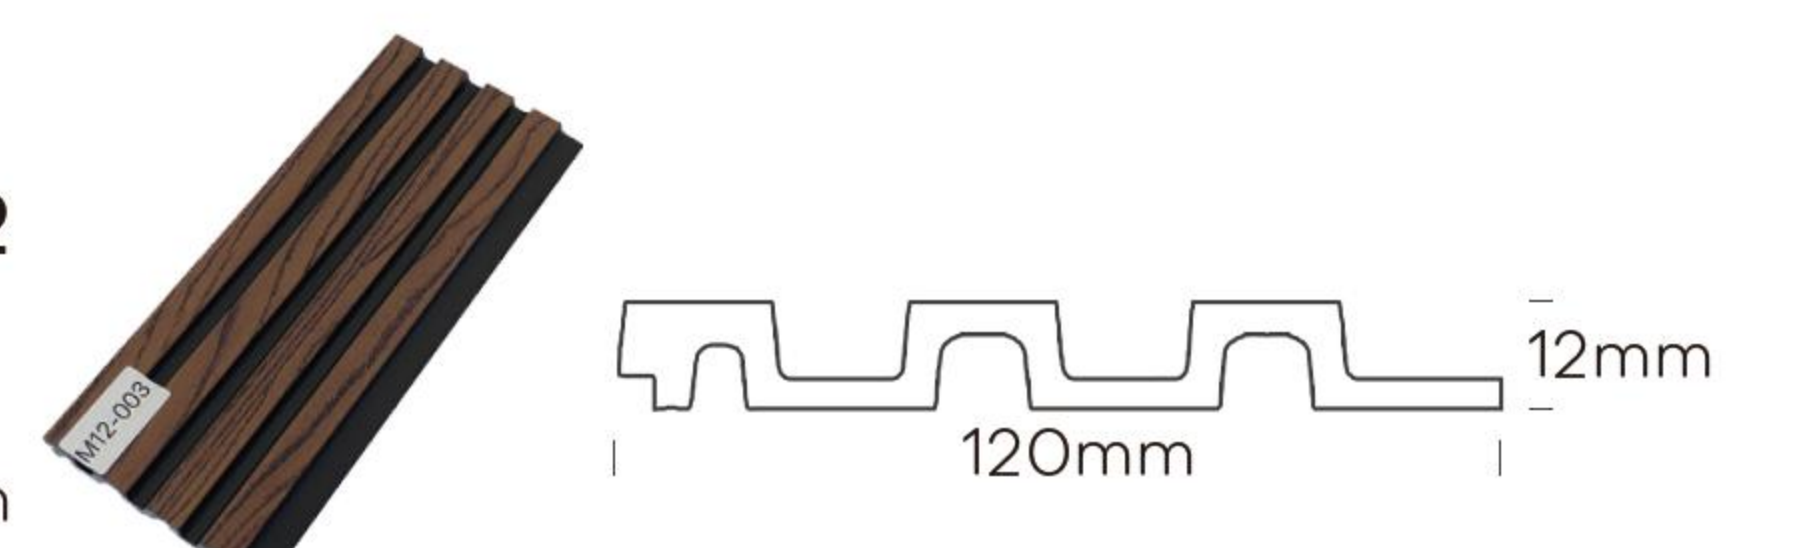


CSW M05

W 120mm
H 10mm
L 2900mm

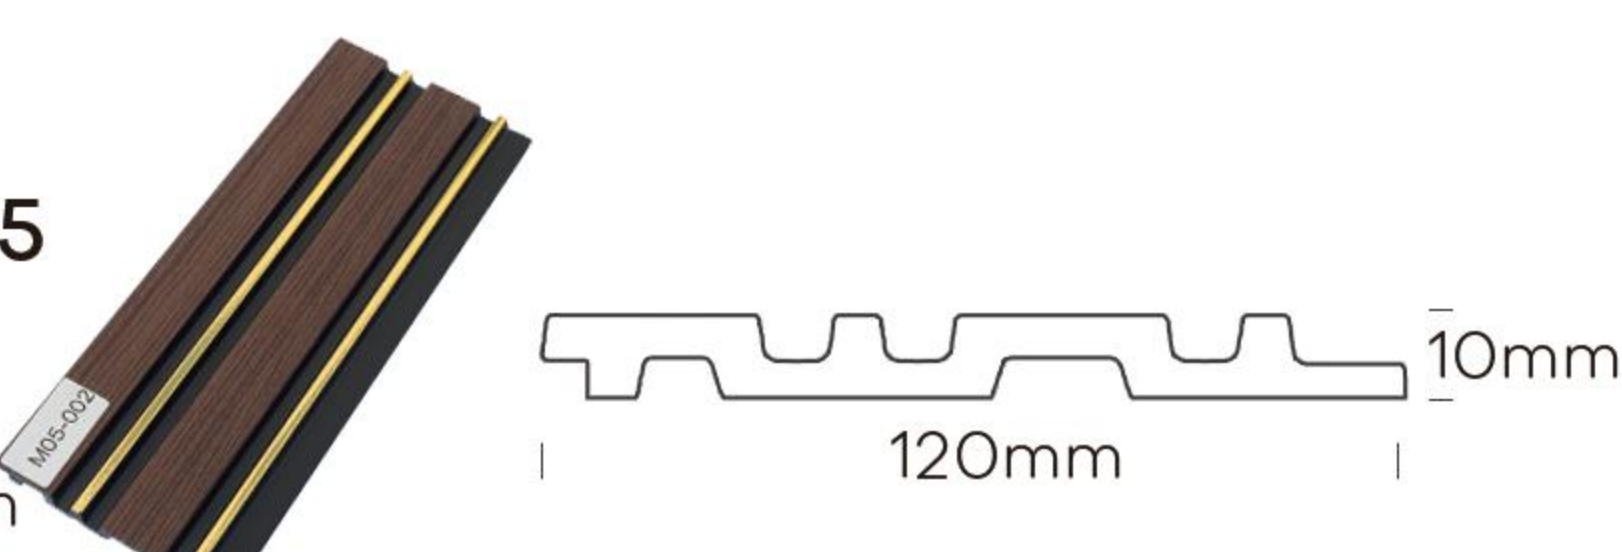


CSW M13

W 120mm
H 11.2mm
L 2900mm

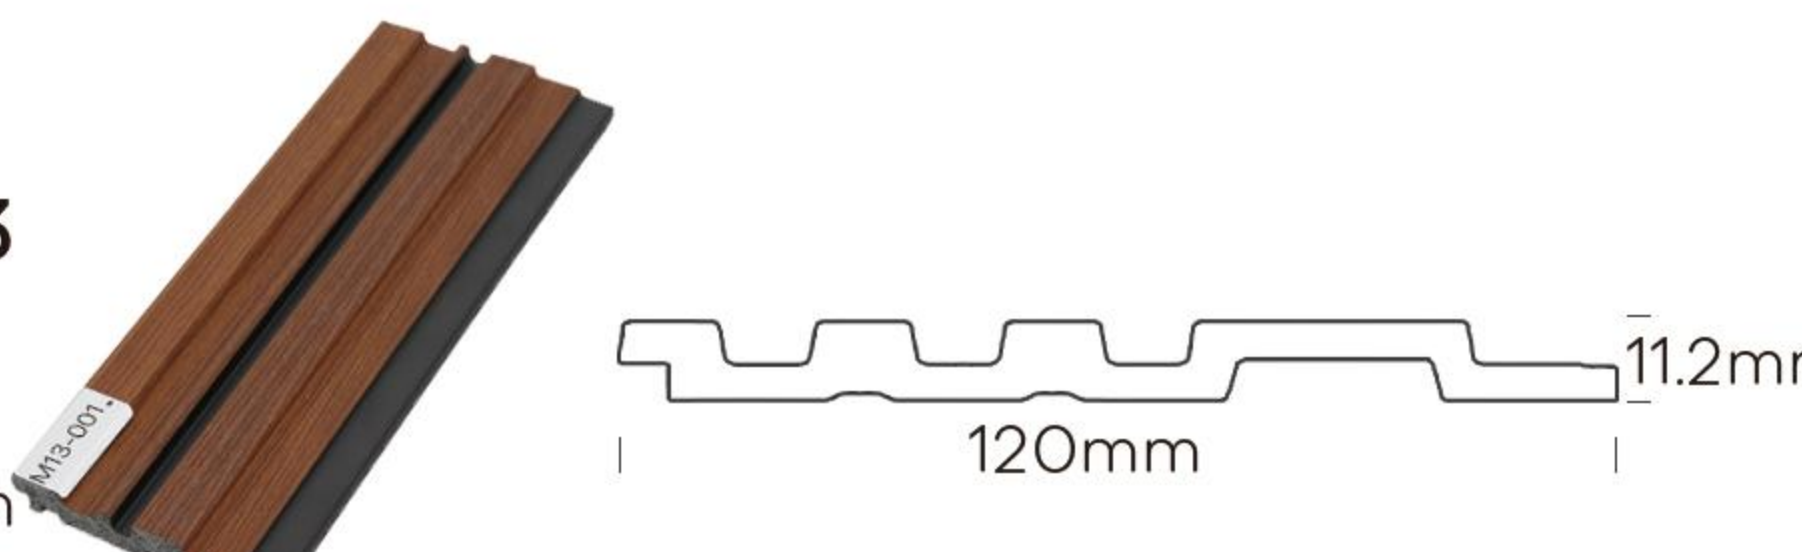


CSW M06

W 120mm
H 20mm
L 2900mm

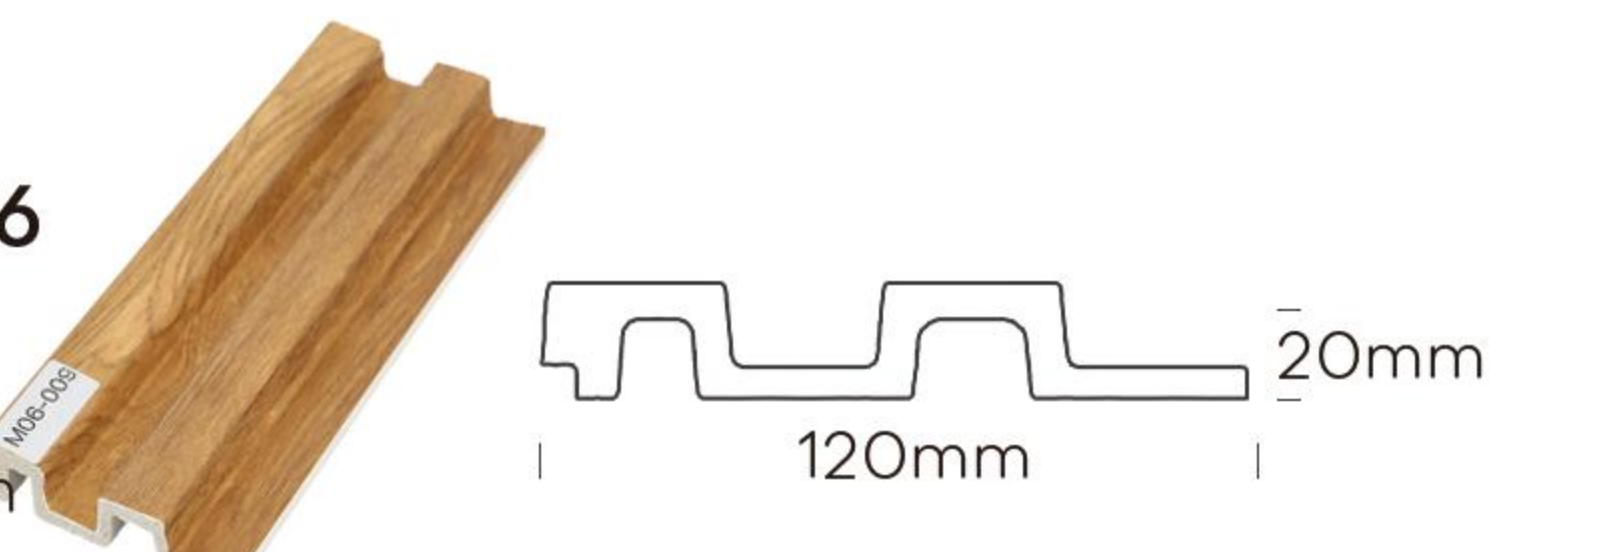


CSW M14

W 120mm
H 12mm
L 2900mm

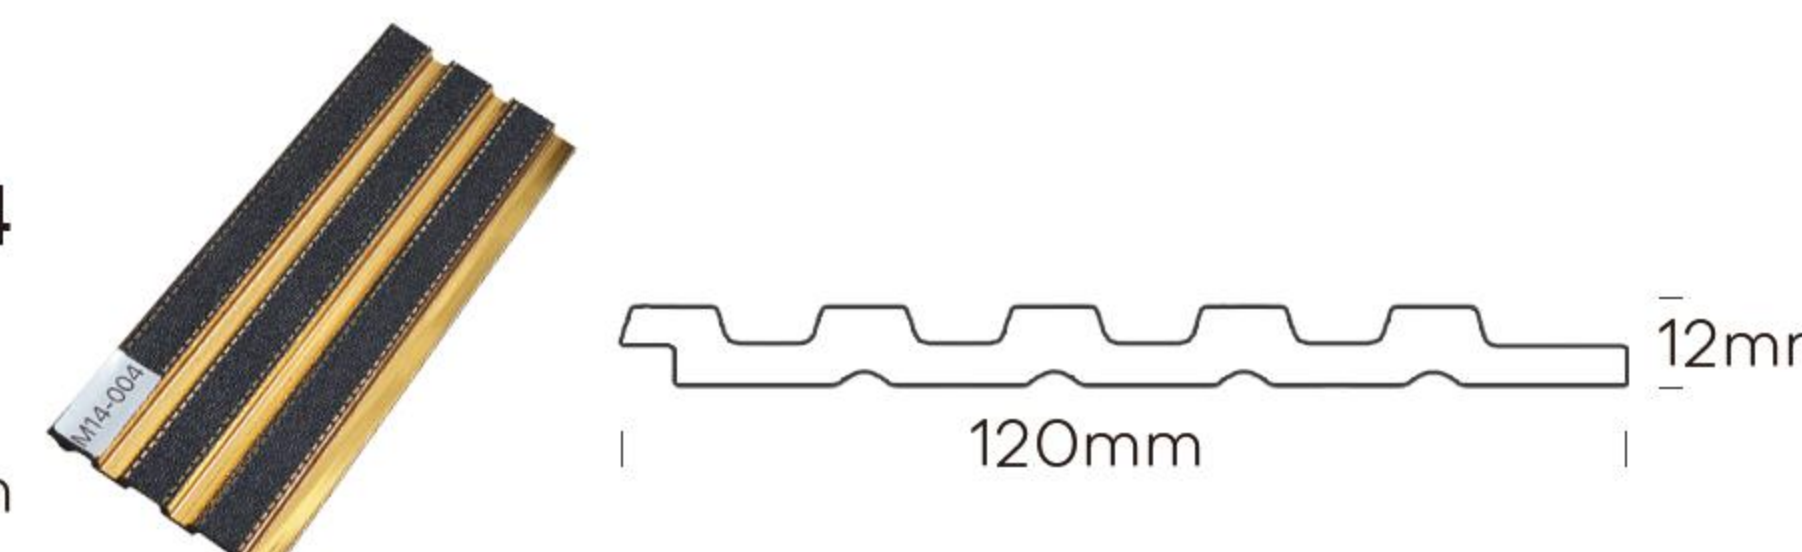


CSW M07

W 120mm
H 12mm
L 2900mm

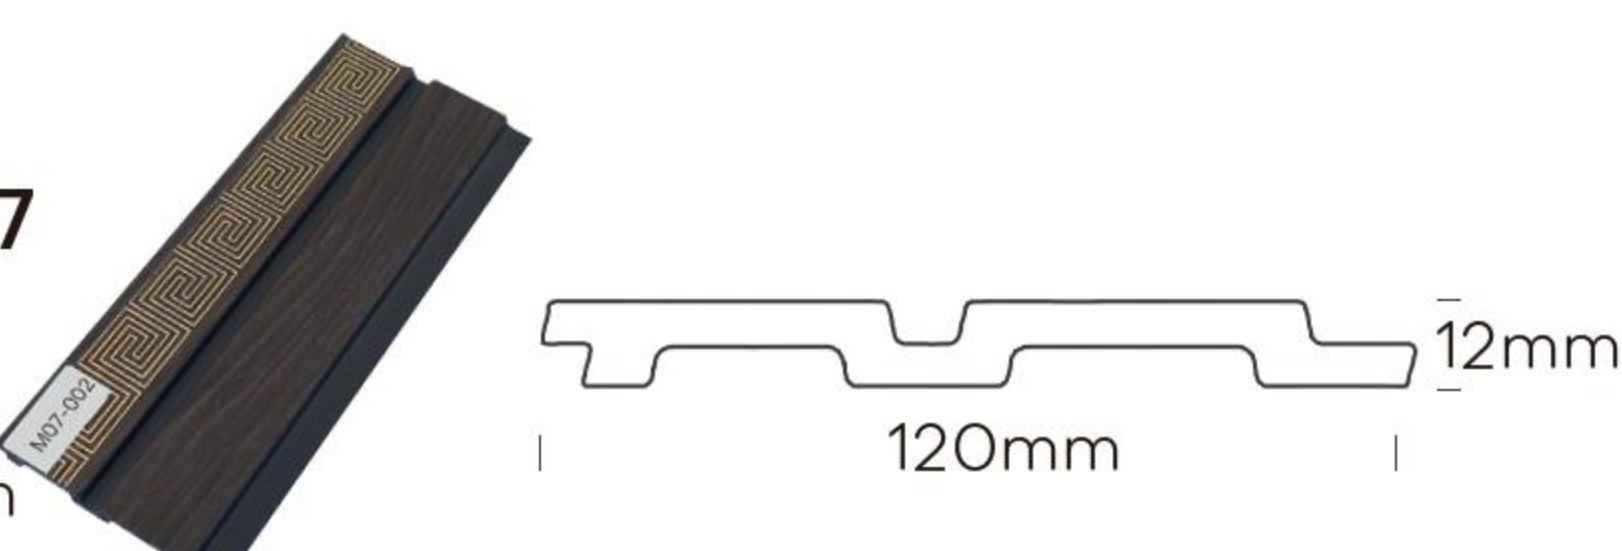


CSW M15

W 120mm
H 12mm
L 2900mm

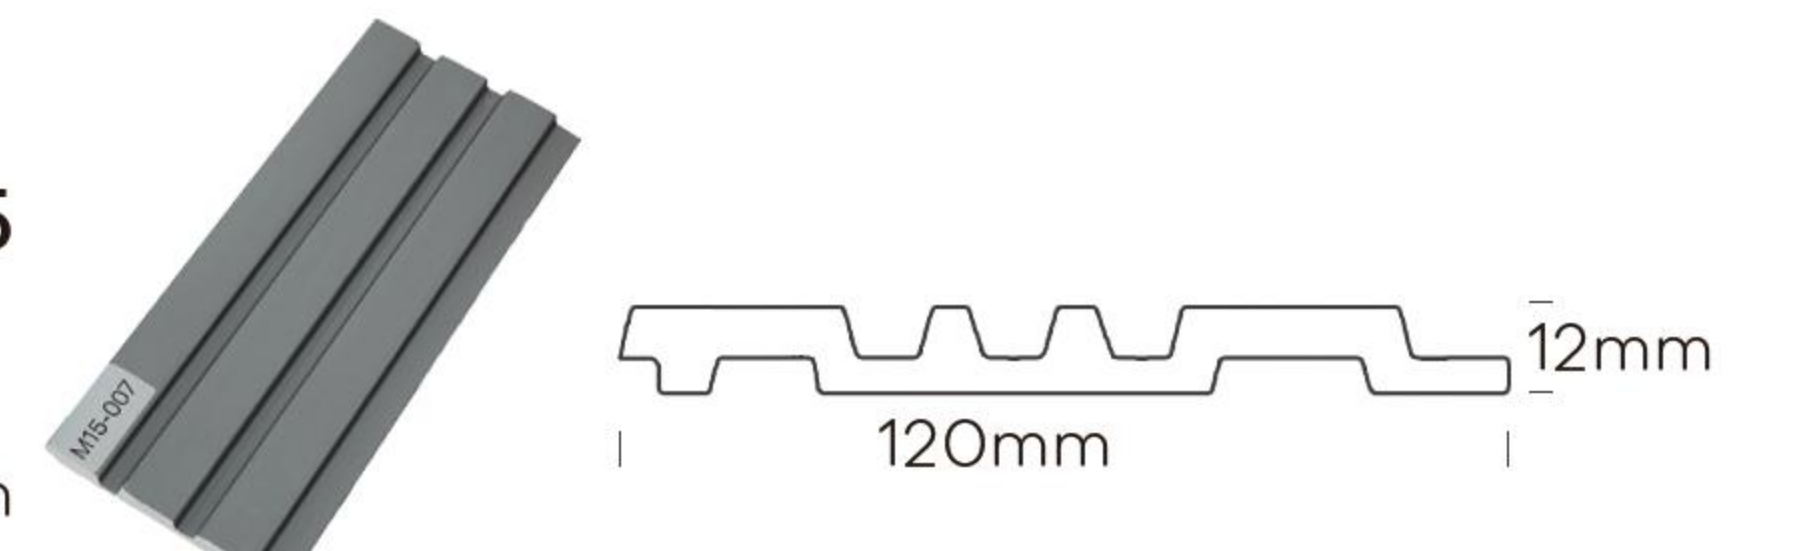


CSW M08

W 160mm
H 12mm
L 2900mm

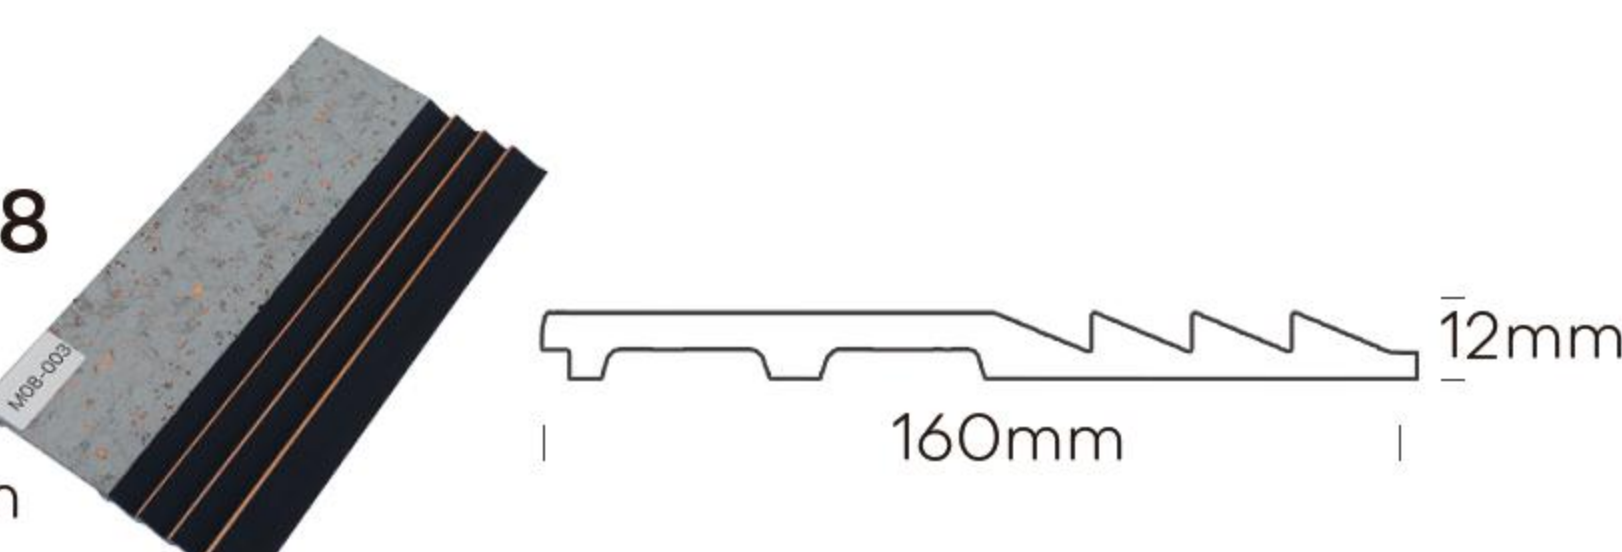


CSW M16

W 160mm
H 20mm
L 2900mm

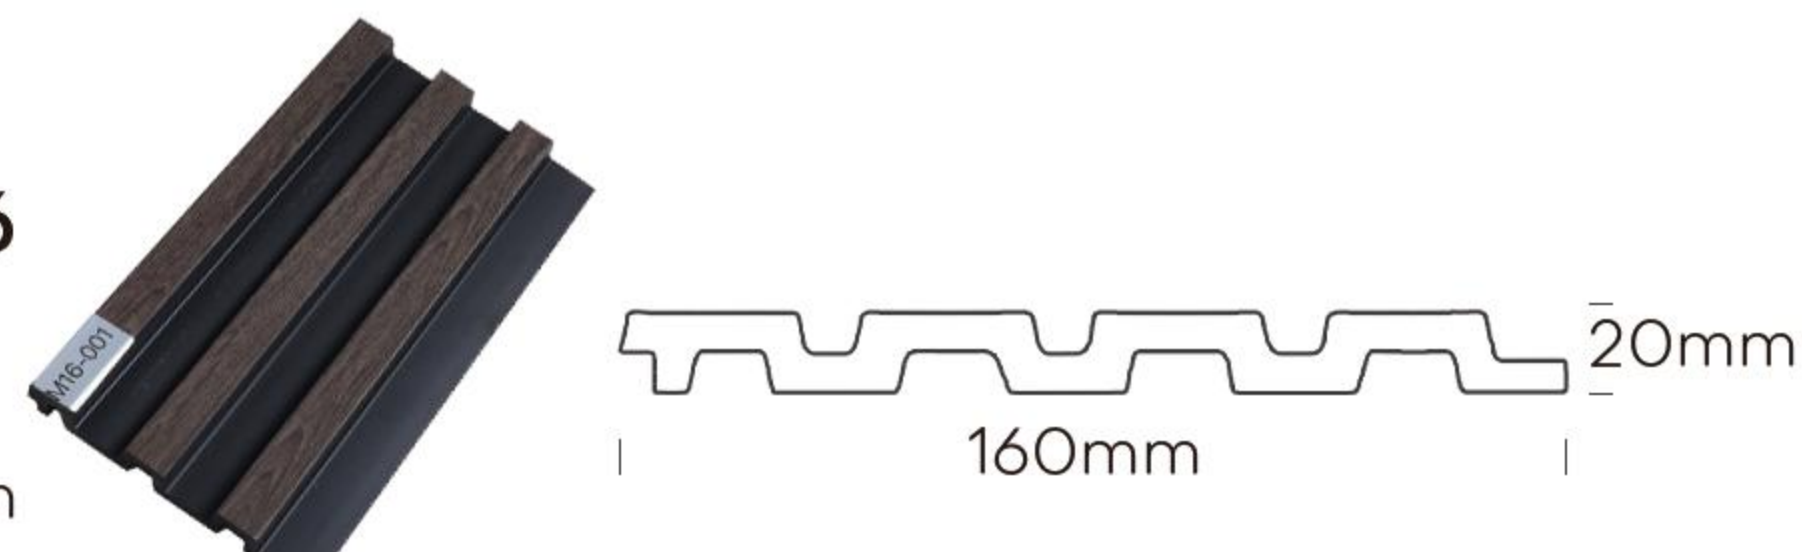


CSW S01

W 300mm
H 7mm
L 2900mm

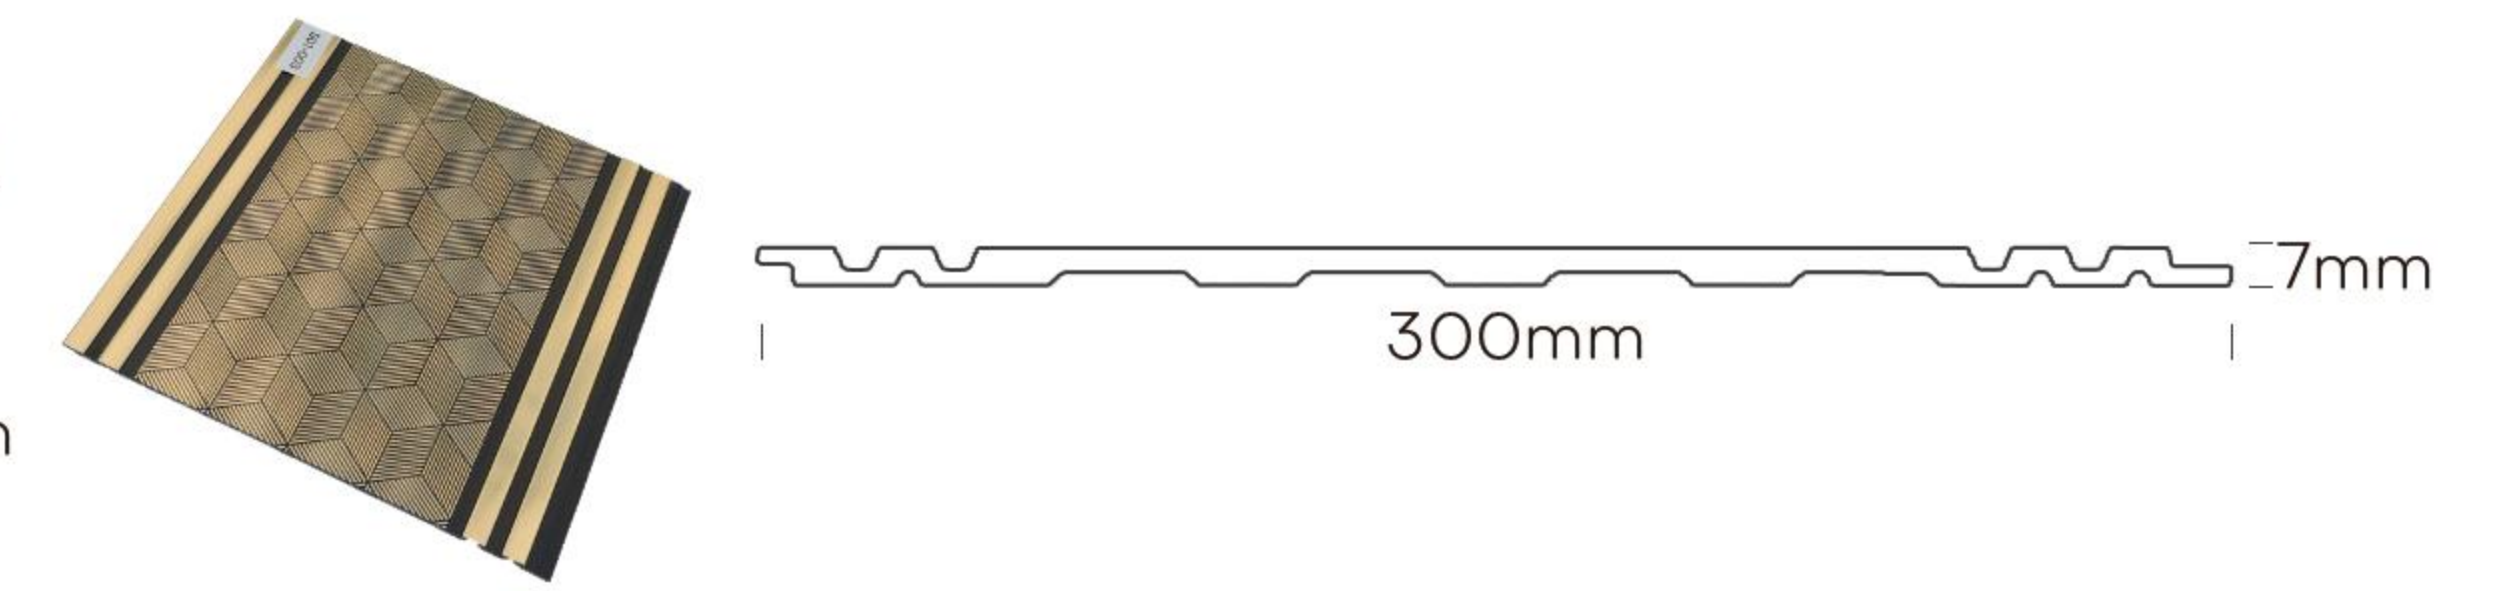


CSW S02

W 300mm
H 7mm
L 2900mm

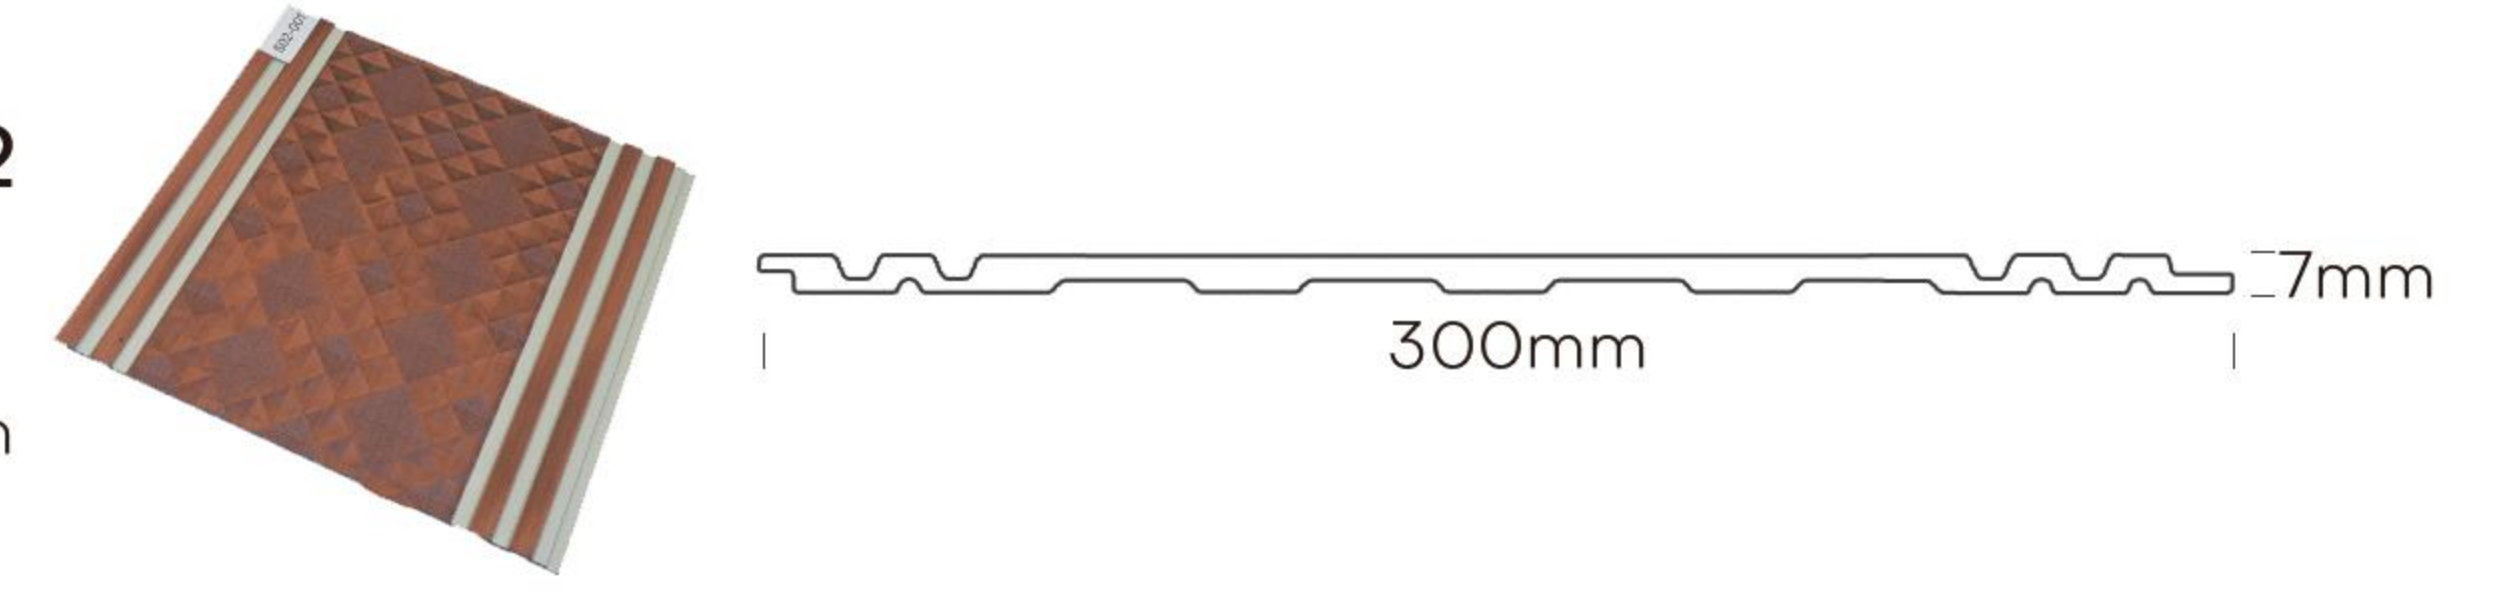


CSW S03

W 300mm
H 7mm
L 2900mm

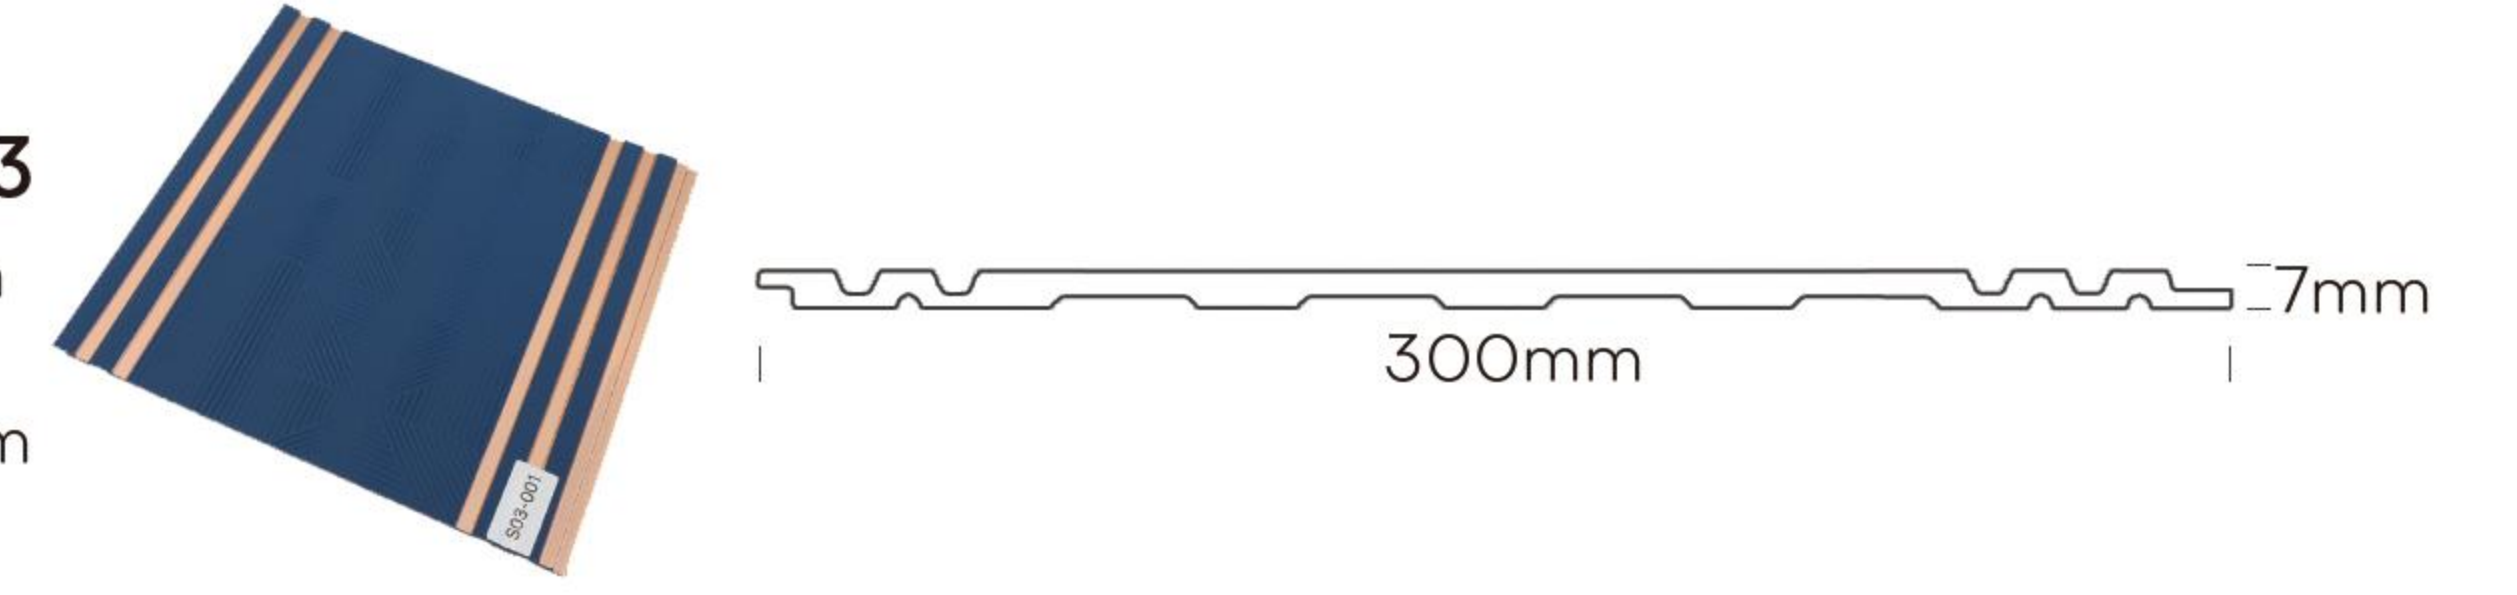


CSW S04

W 300mm
H 7mm
L 2900mm

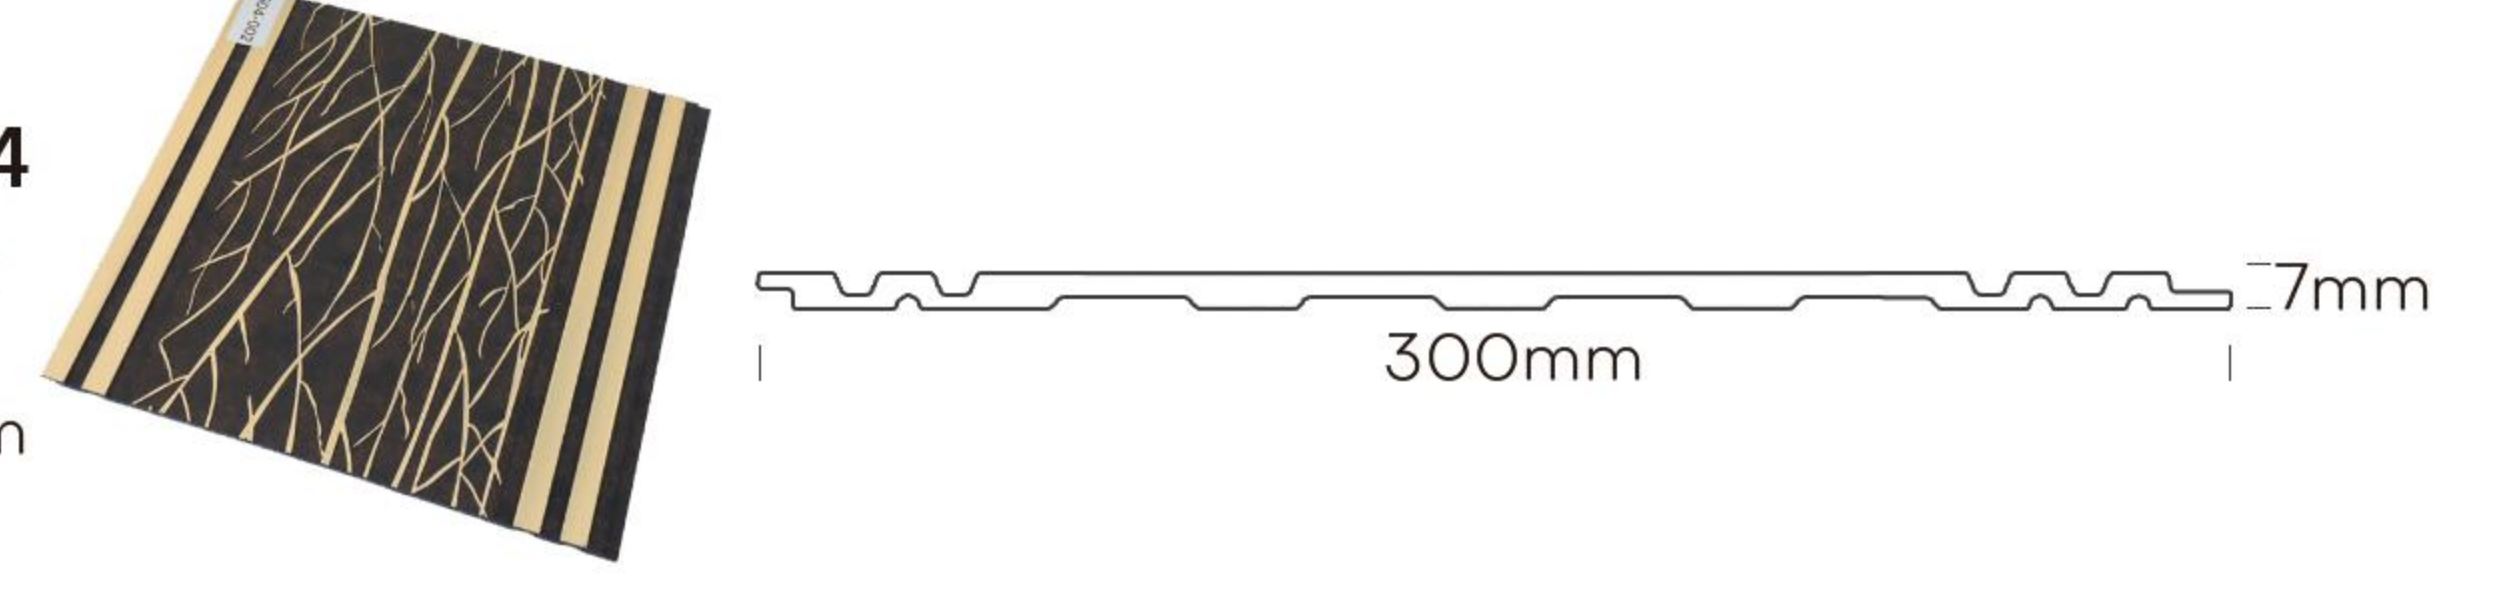


CSW S05

W 300mm
H 7mm
L 2900mm

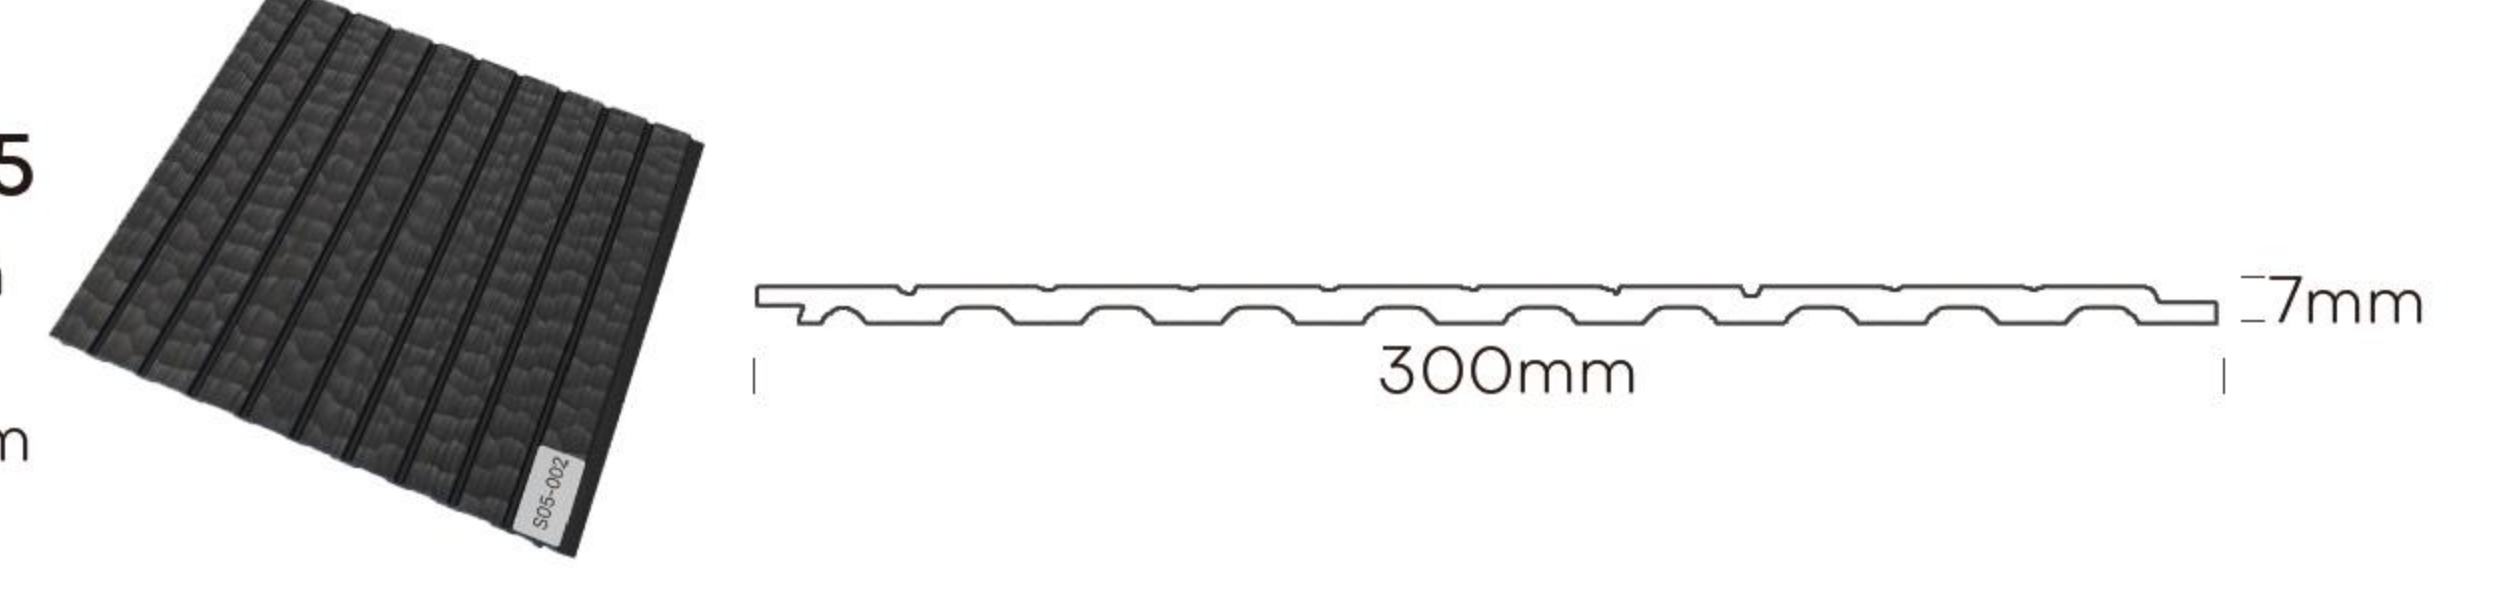


CSW S06


W 300mm
H 7mm
L 2900mm

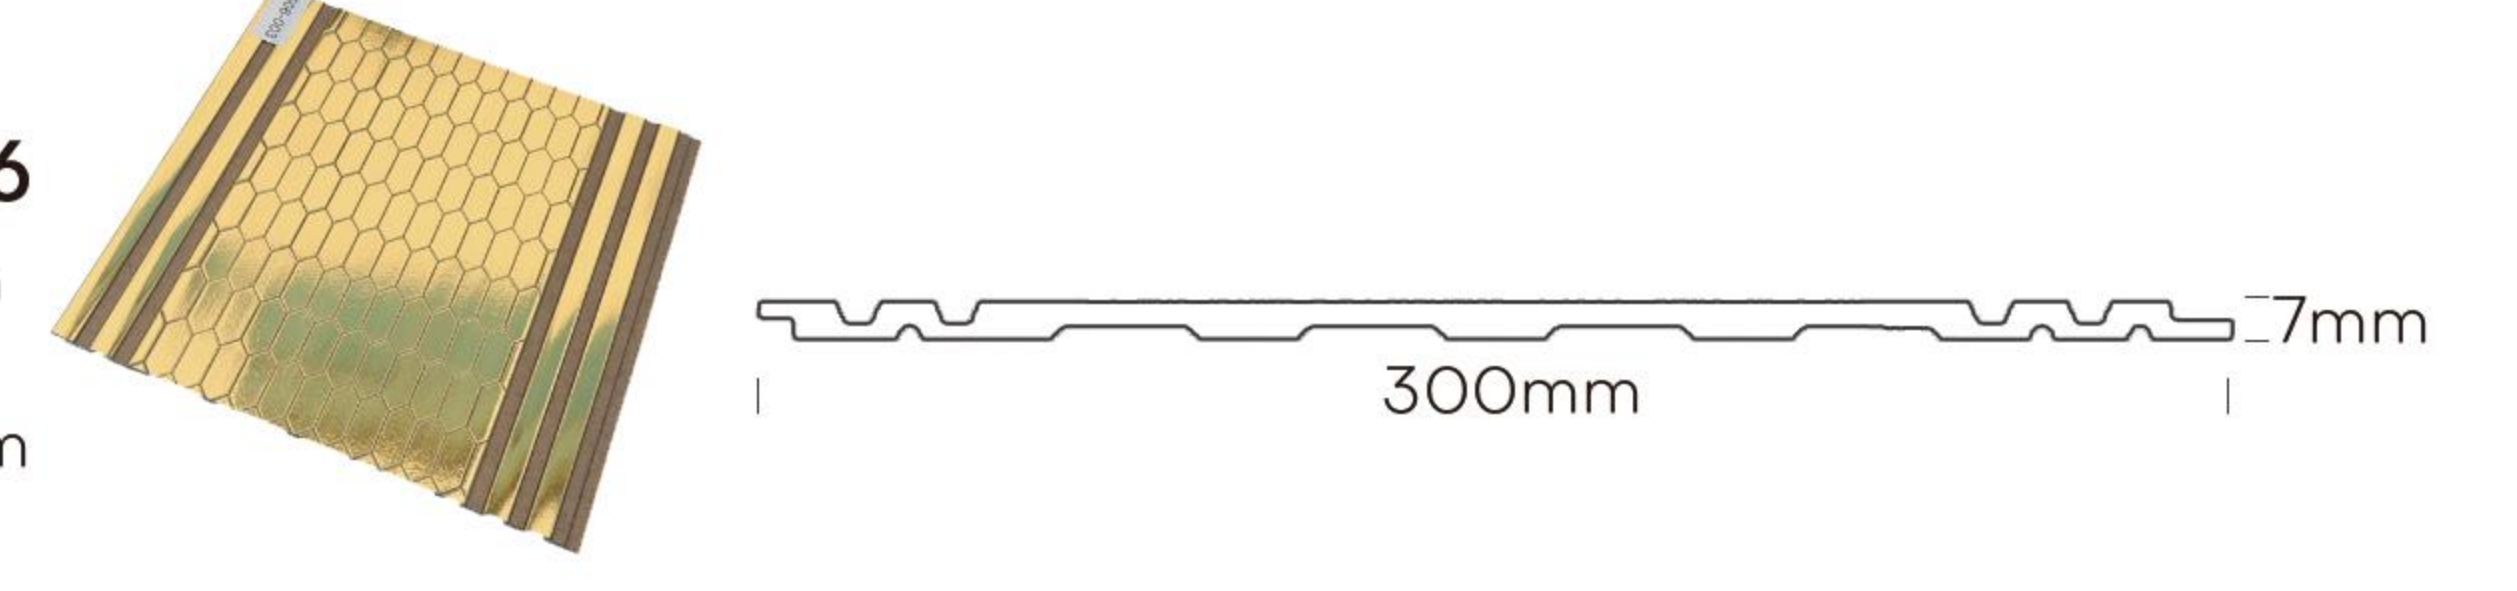

CSW S07


W 300mm
H 8mm
L 2900mm

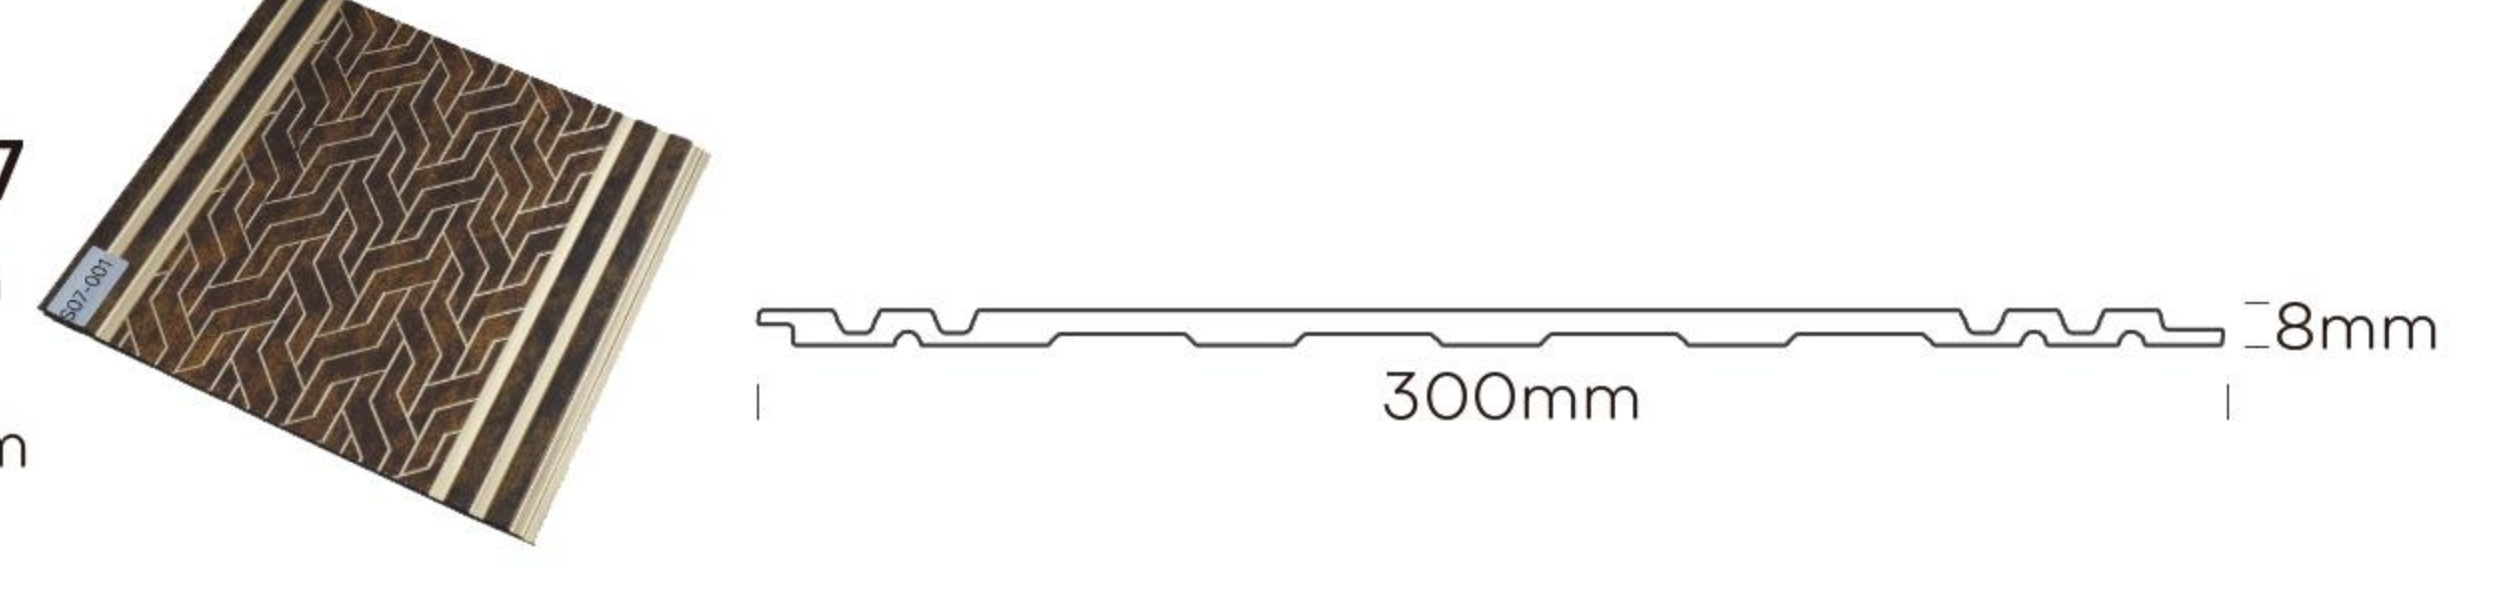

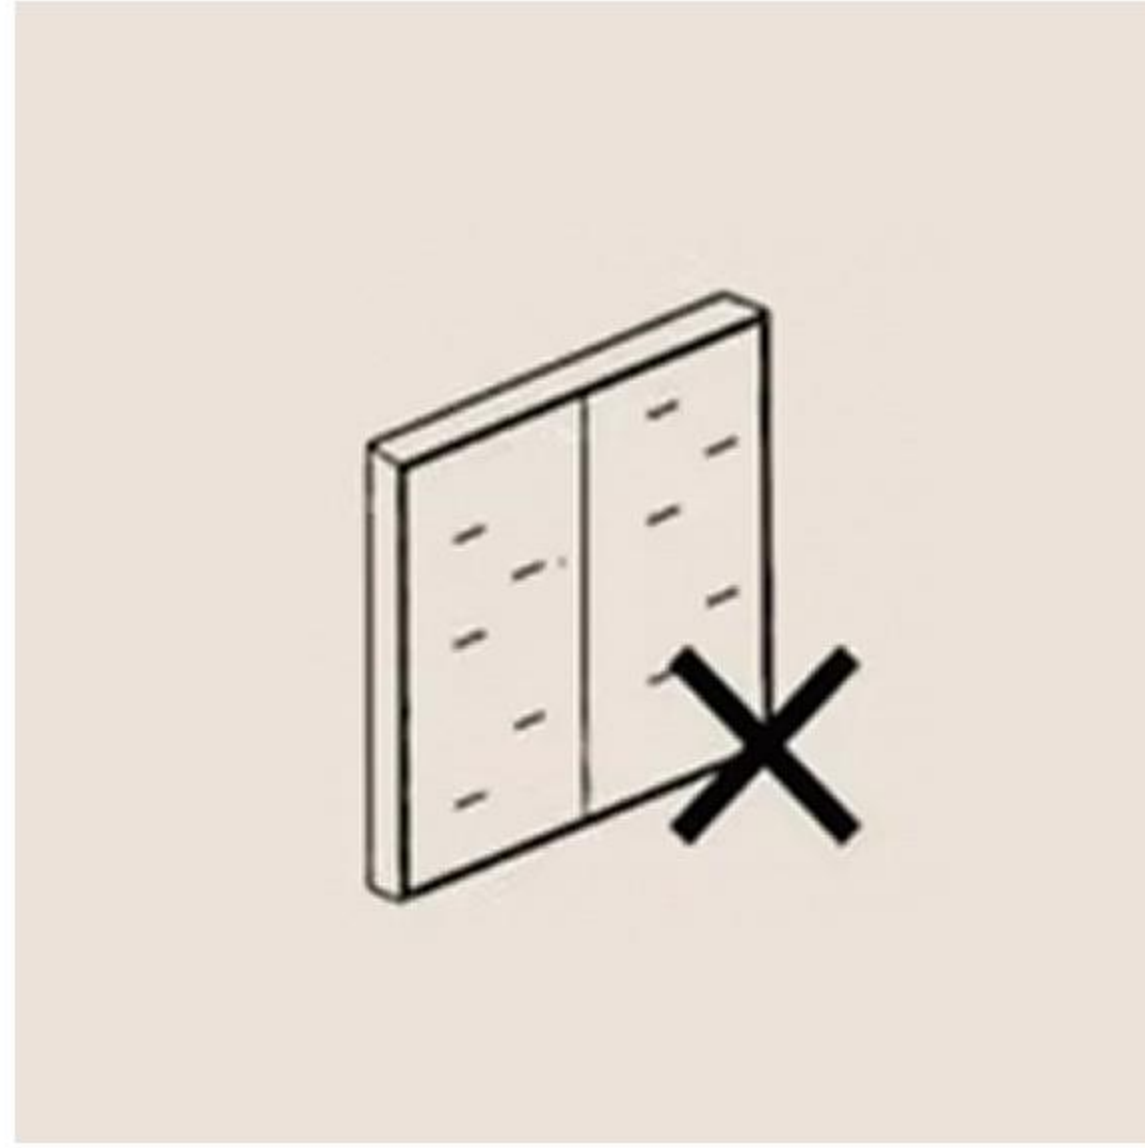


• **Step 1**

Clean the wall surface thoroughly and ensure it is flat.

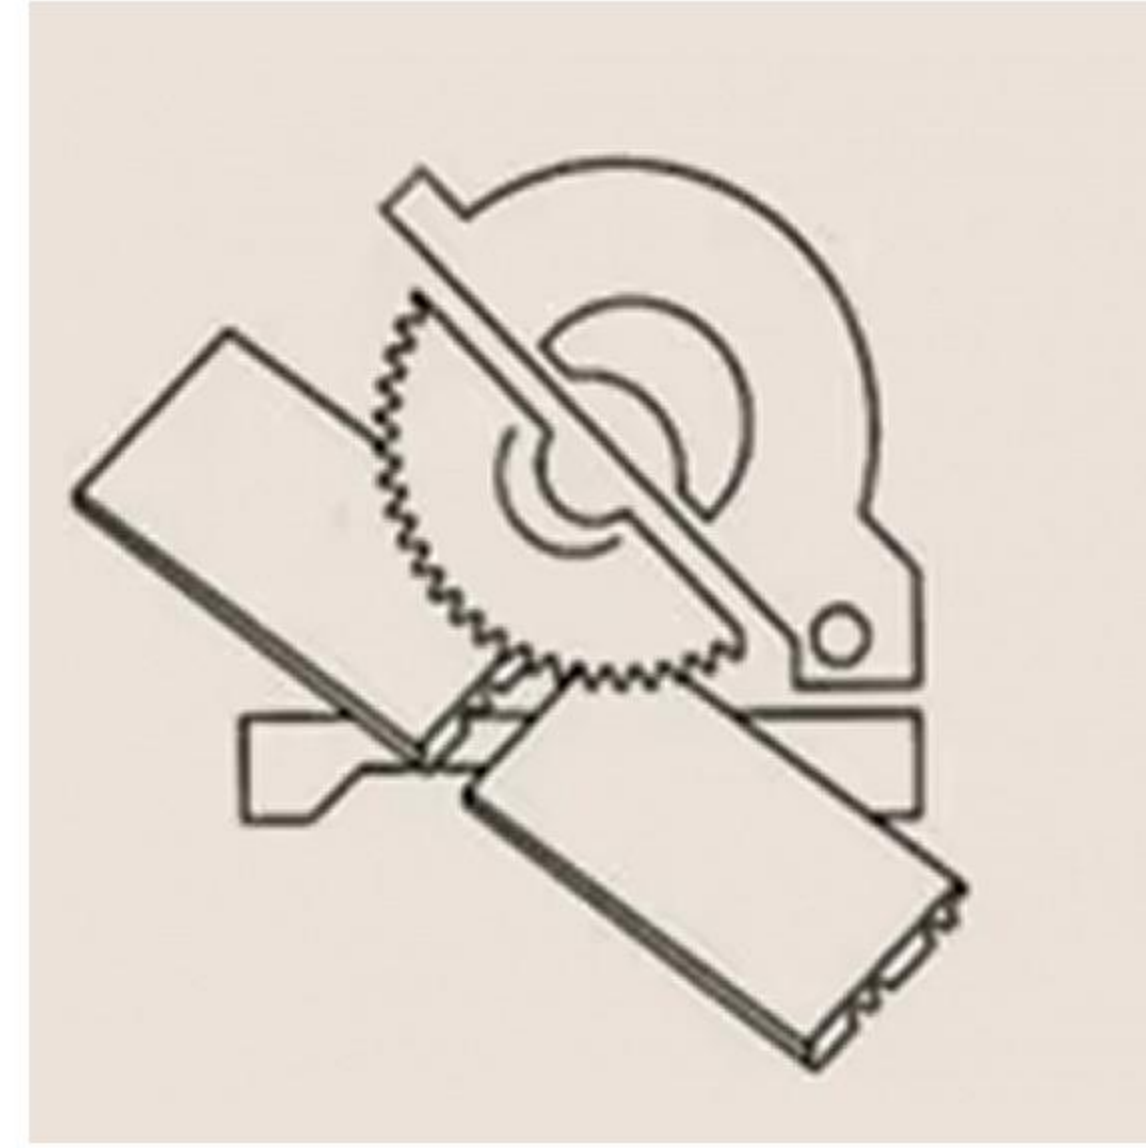


• **Step 2**

Measure and cut the panels to fit.

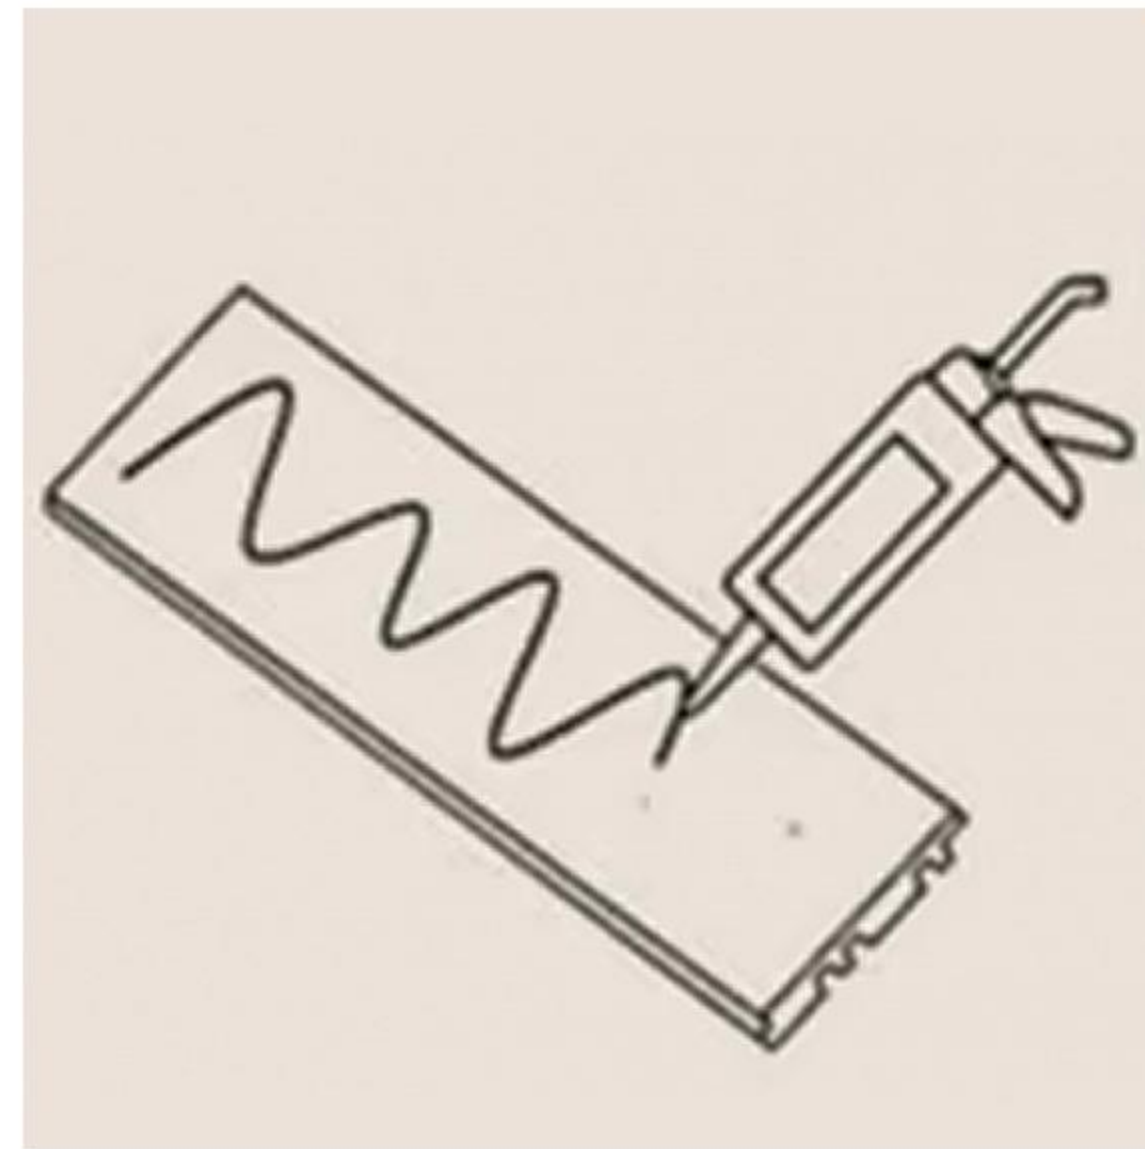

• **Step 3**

Apply nail free glue to the back.

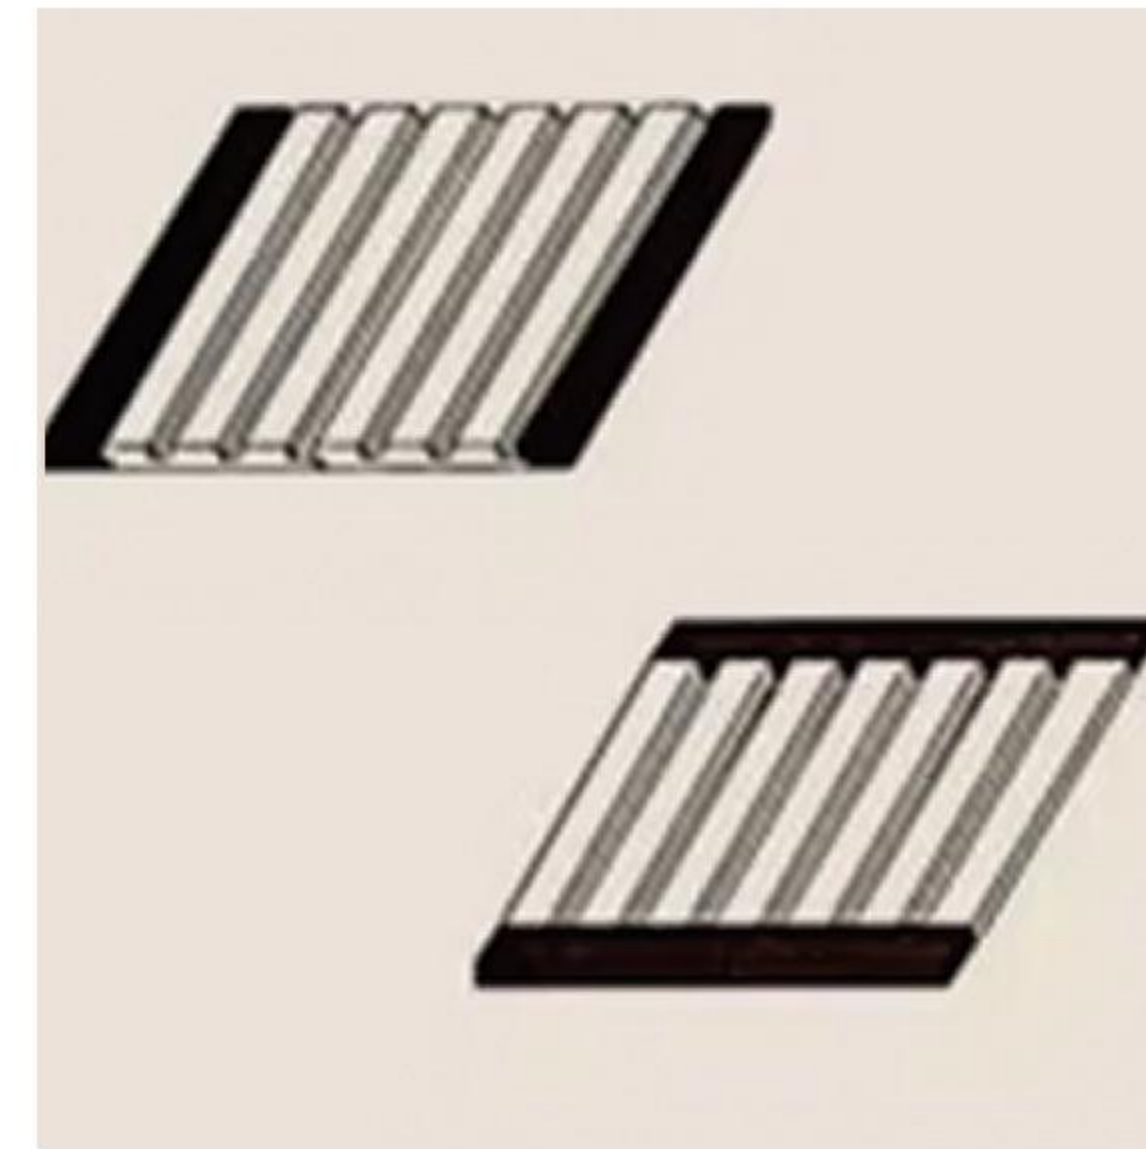

• **Step 4**

Complete the installation.

