


AesthEdge

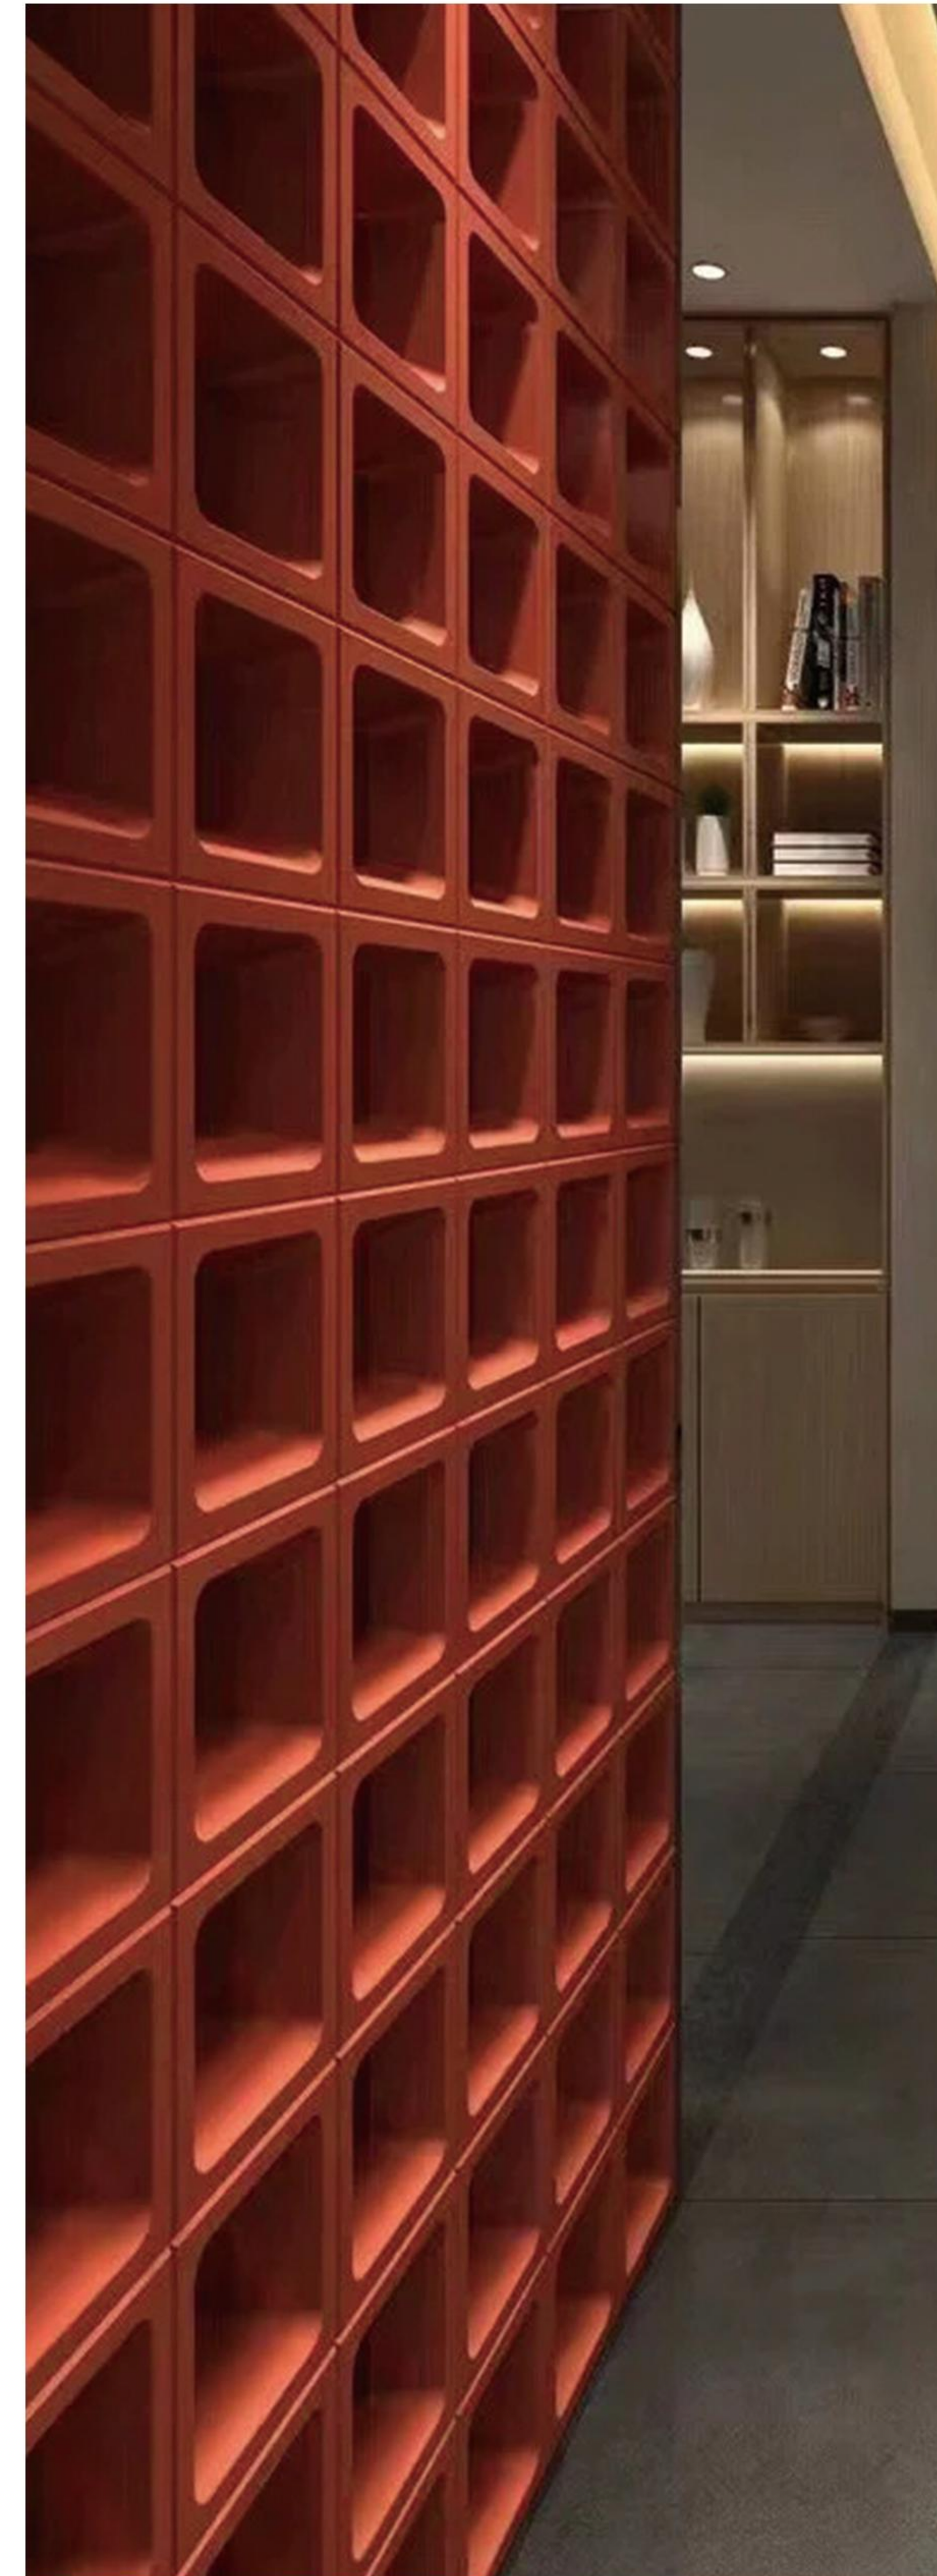

PU STONE PANEL

AesthEdge



+8618953955575



angela@aesthedge.com



www.aesthedge.com




Rm1103, A10Building,Lushang Center,Guangzhou Road,
Lanshan District,Linyi City,Shandong Province,China

Pu Stone refers to polyurethane stone, also known as artificial rock, it is an artificial stone made from materials such as polyurethane resin, fillers, and pigments through a series of processes. PU stone is a high-tech stone, we reduce the cost of stone but also retain its natural beauty. PU Stone Panel has relatively good temperature resistance and can usually be used in the temperature range of -20 degrees to 120 degrees. And non-toxic, odorless, can be used after installation.



HOLLOW BRICK

Thickness: 15-30mm
600mm*1200mm*35mm

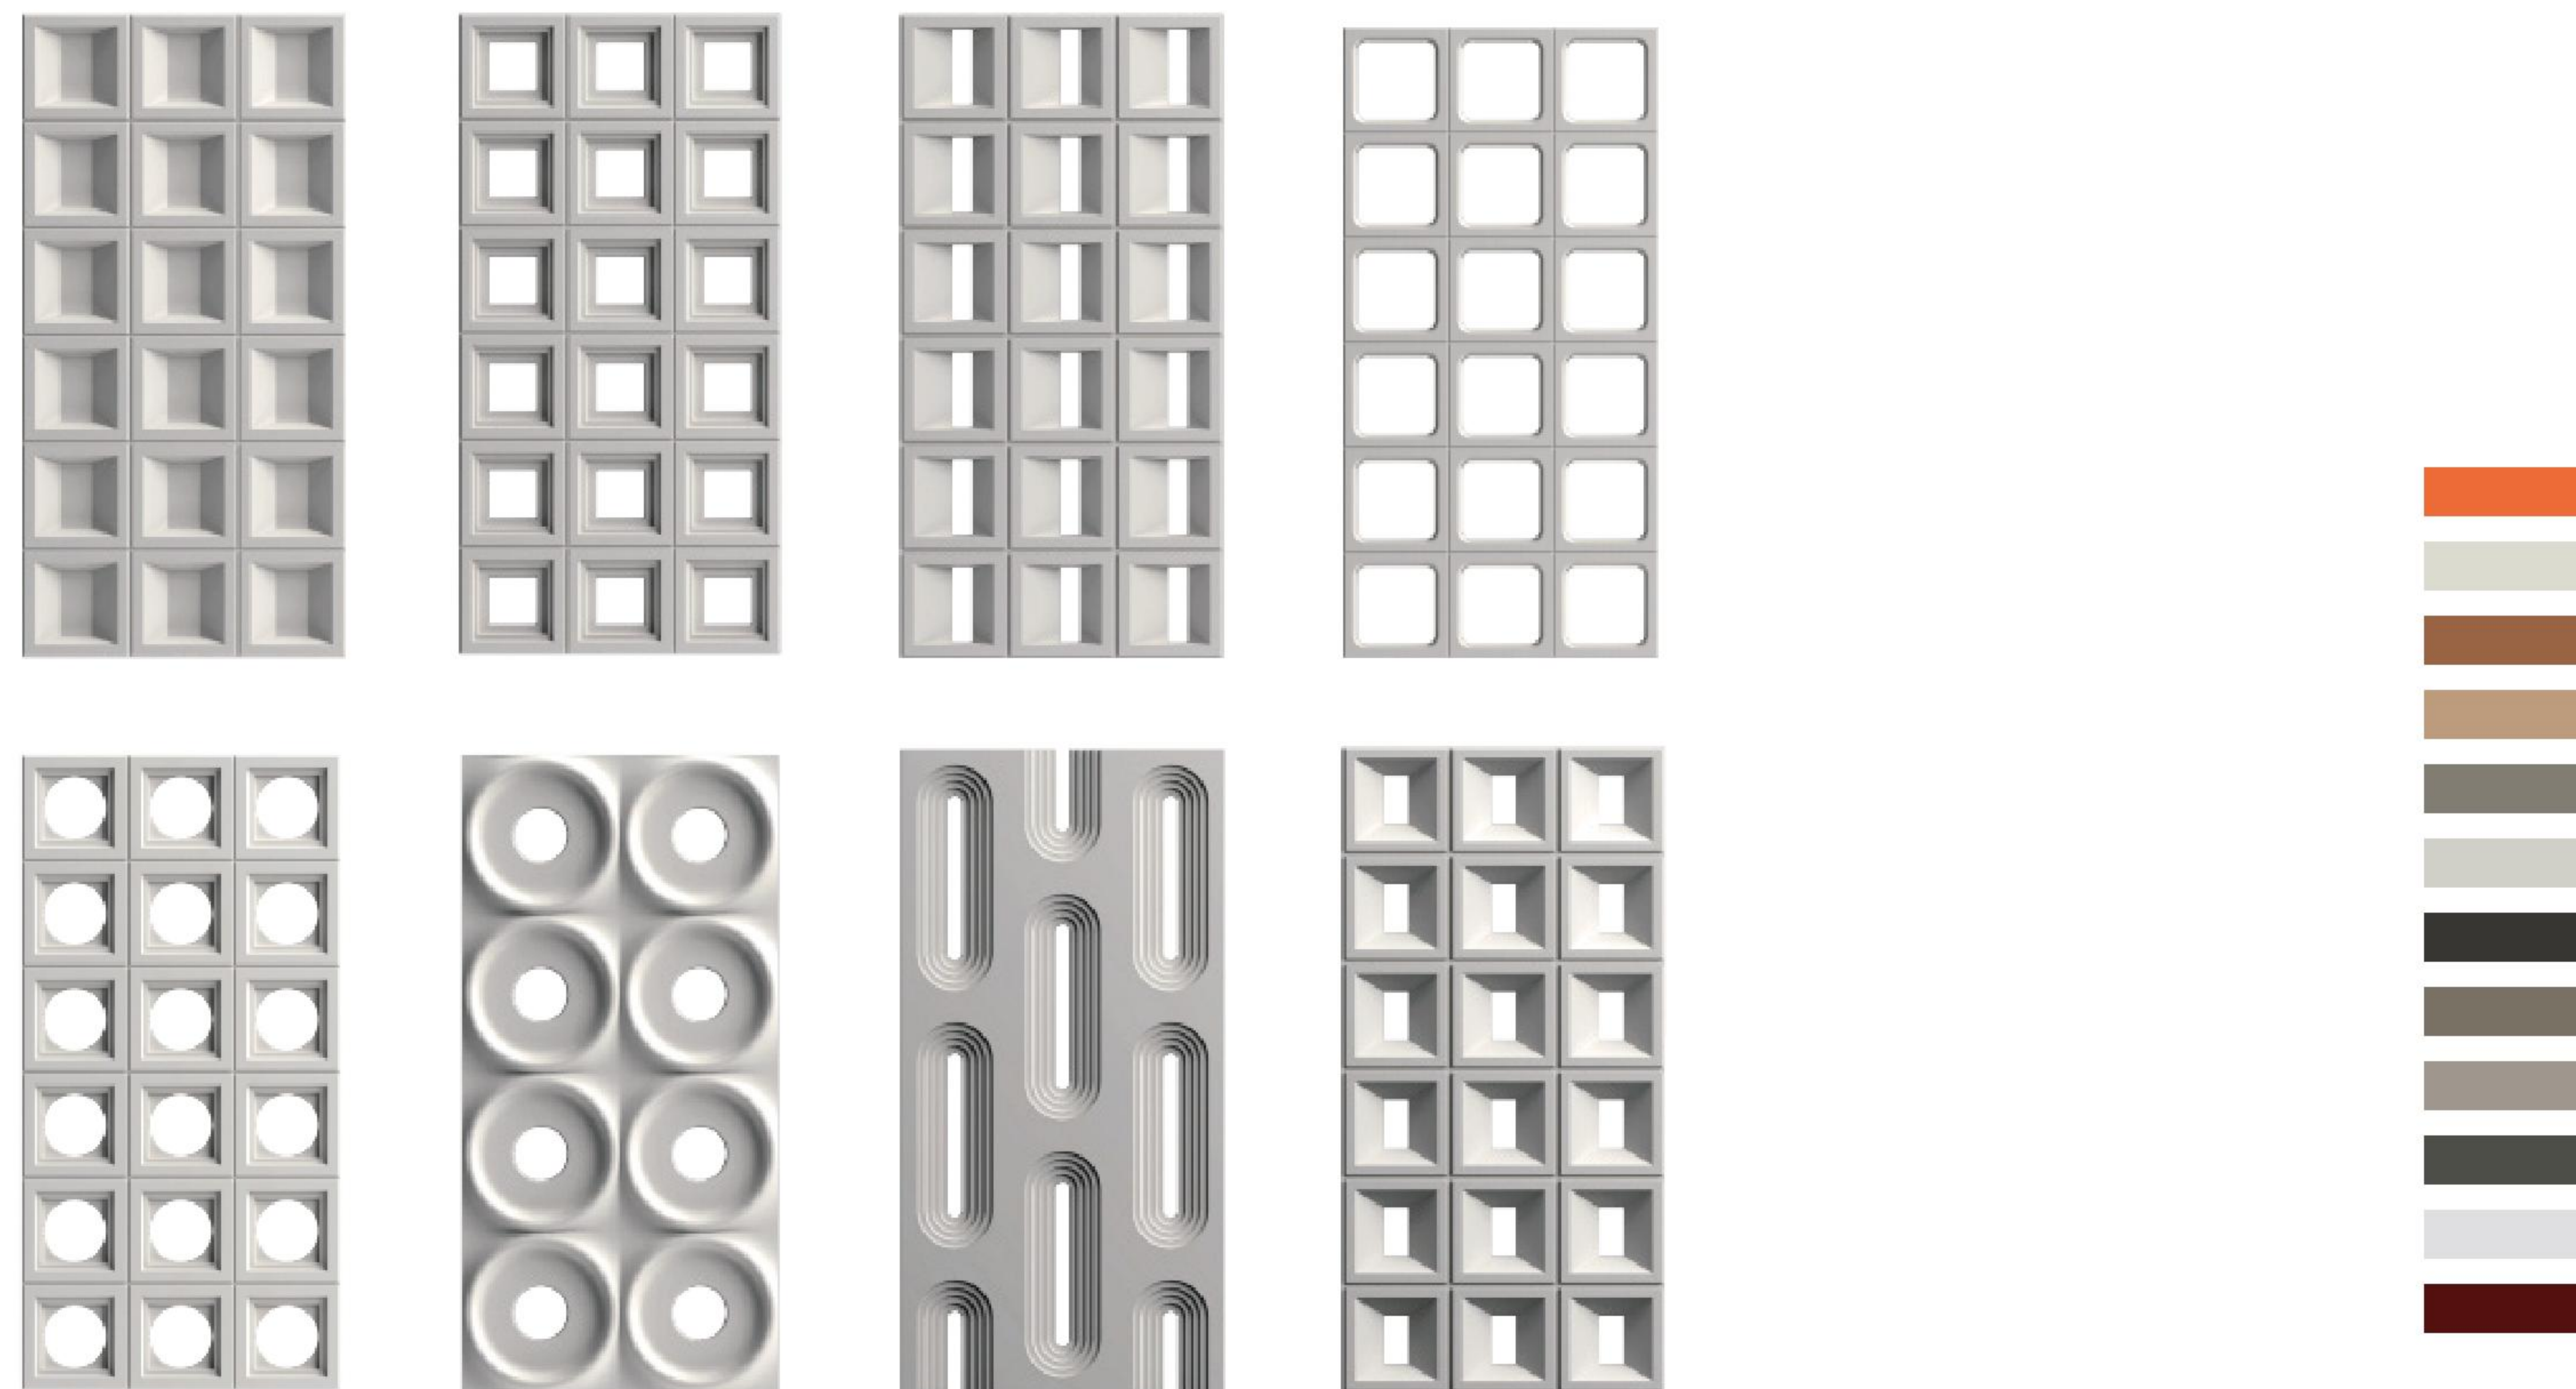

PU MOUNTAIN ROCKS

Thickness: 10-80mm
600mm*1200mm*70mm






PU BIG SLABS

Thickness: 35mm
600mm*1200mm*35mm



PU GEOMETRY SERIES


Thickness: 10-80mm
600mm*1200mm*22mm

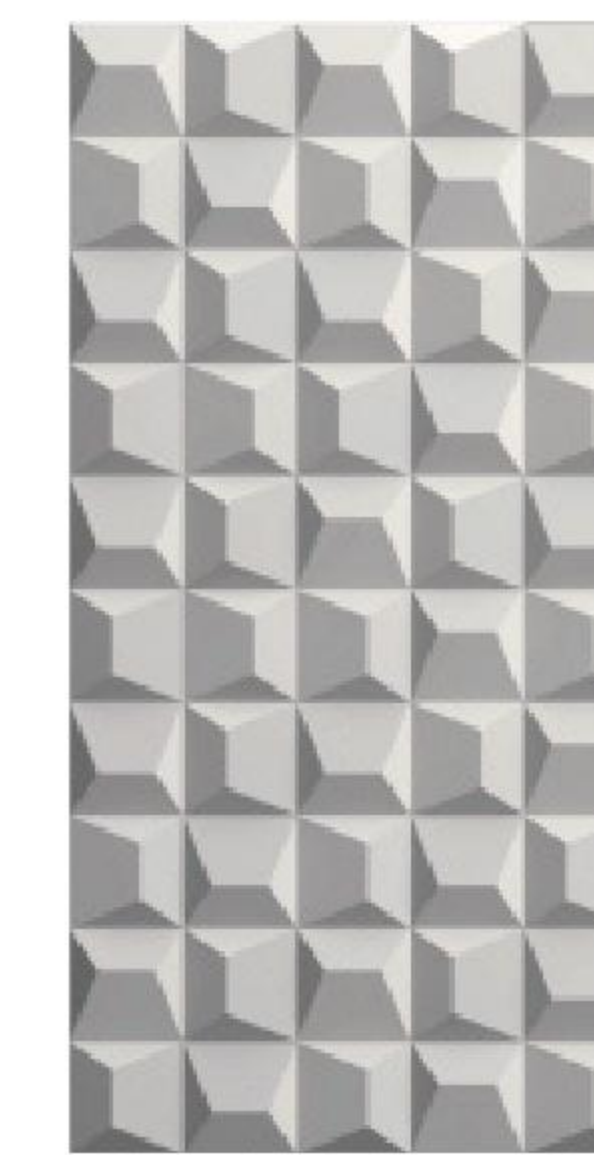


600*1200*22mm



600*1200*22mm

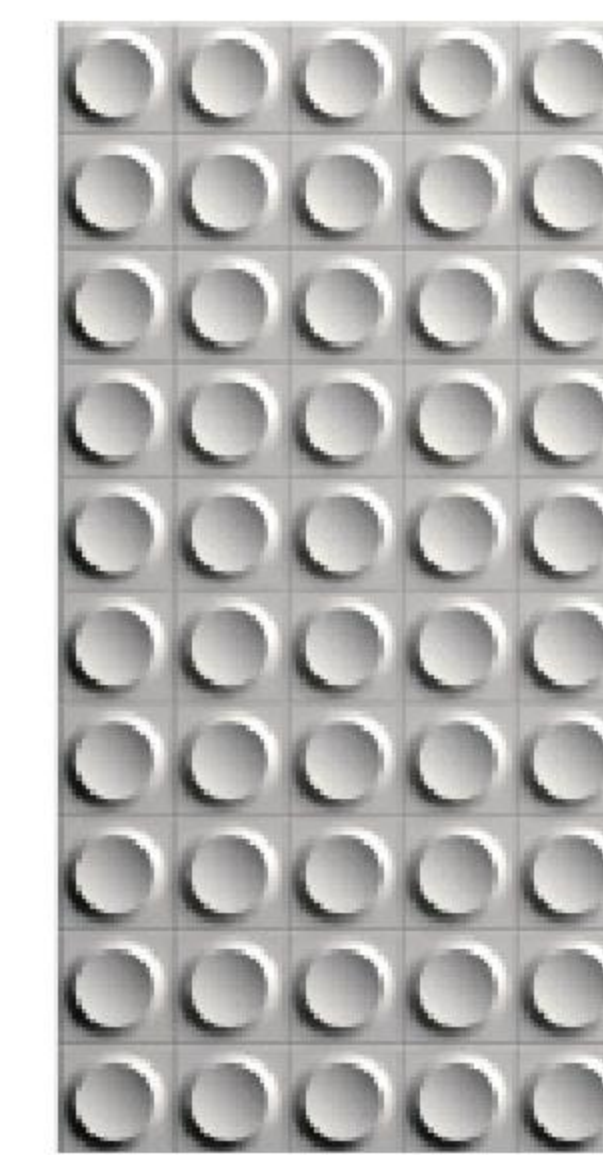


600*1200*22mm

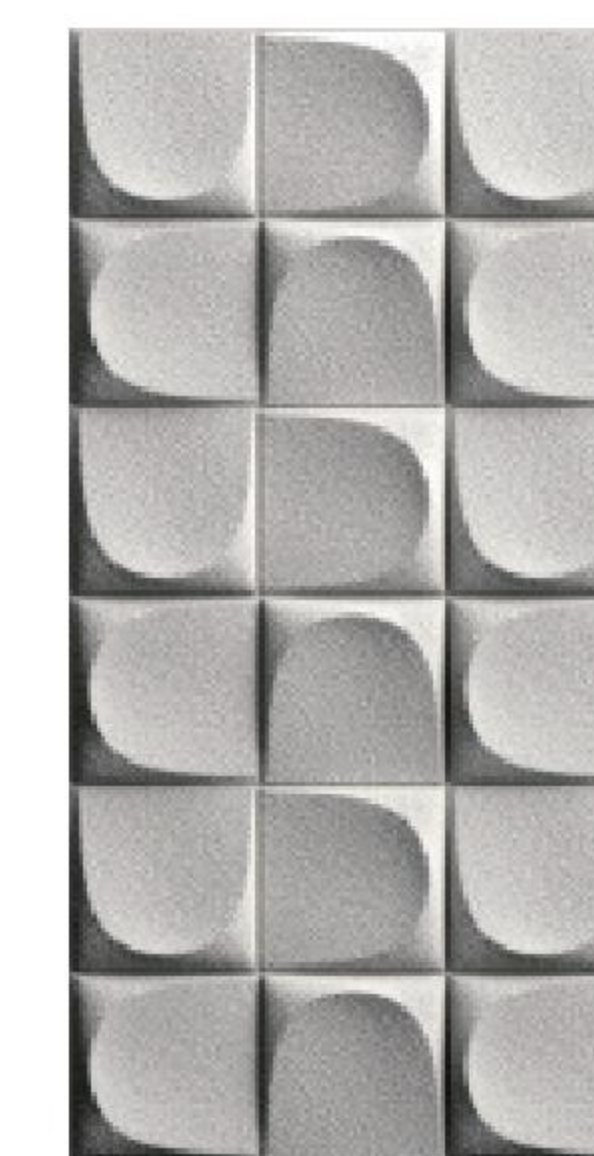

600*1200*35mm



600*1200*22mm

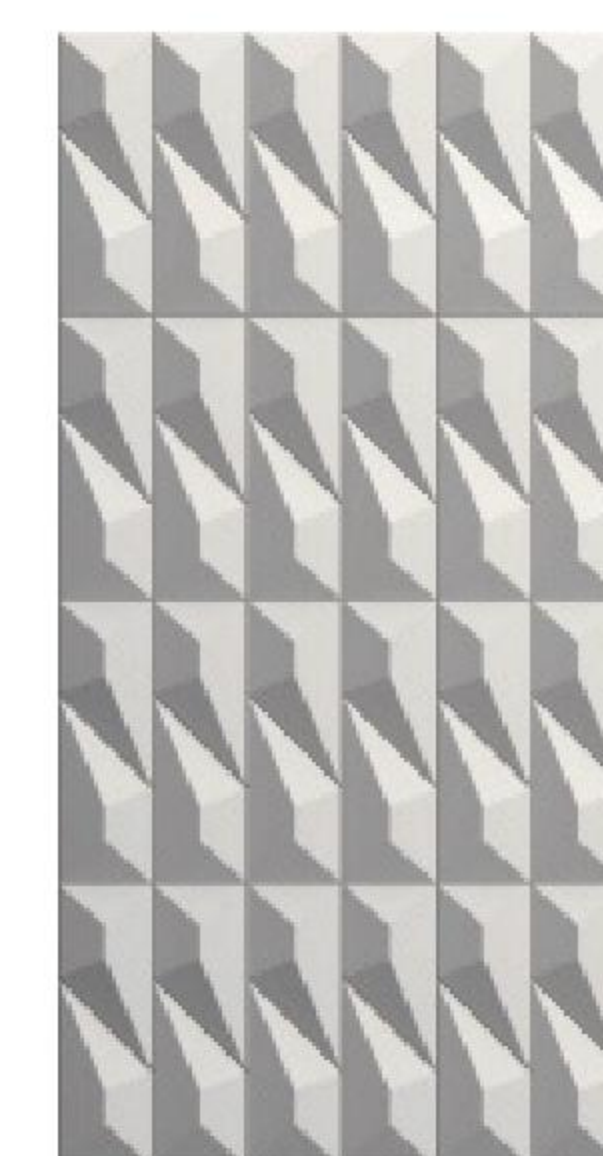

600*1200*22mm



STACKED PEAK STONE

Thickness: 10-80mm
600mm*1200mm*50mm




MOUNTAIN ROCK

Thickness: 10-80mm
600mm*1200mm*50mm



PU STONE SKIN

Thickness: 35mm
600mm*1200mm*35mm

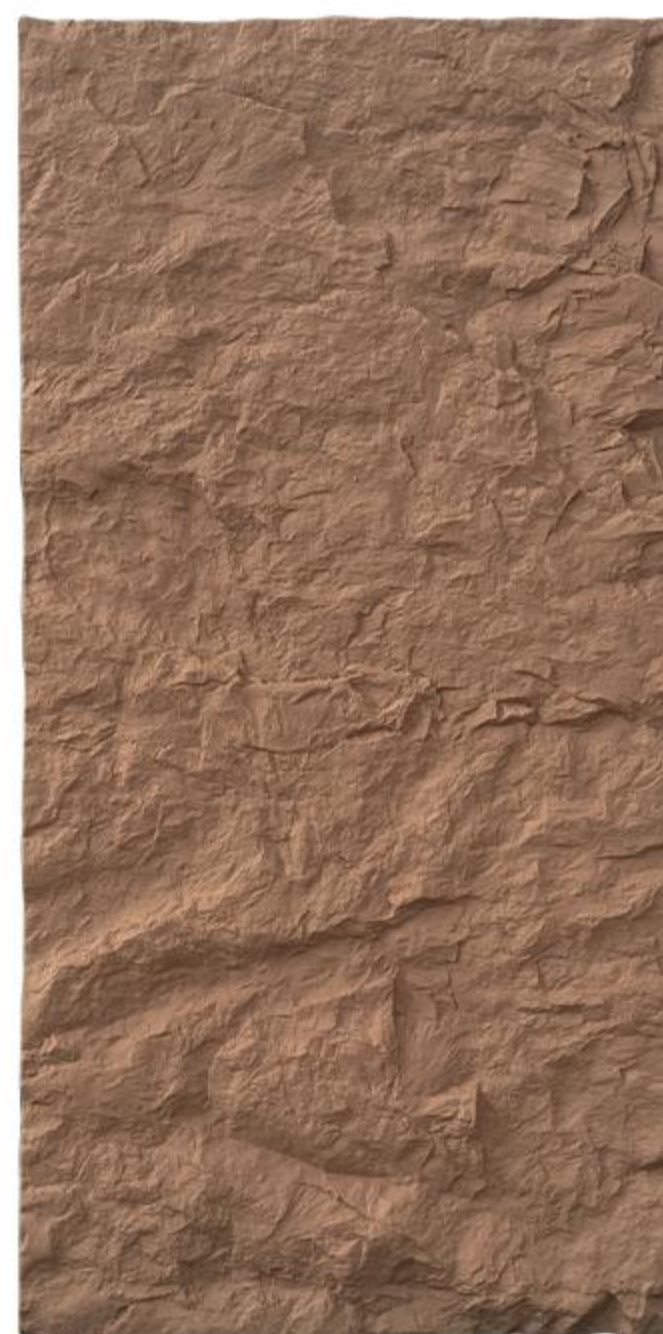




PU Shale Stone



PU Stone Skin



PU Mushroom Stone

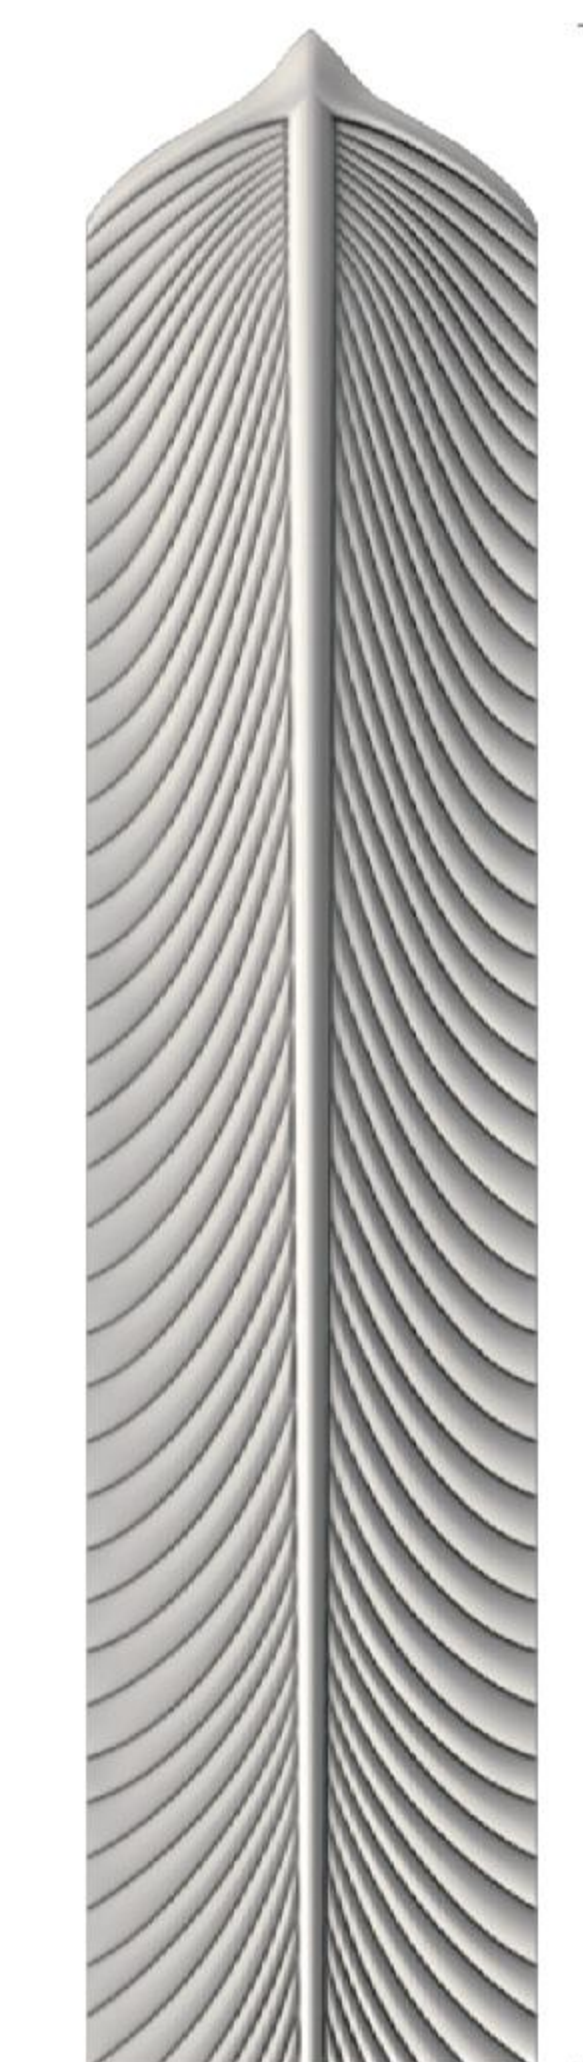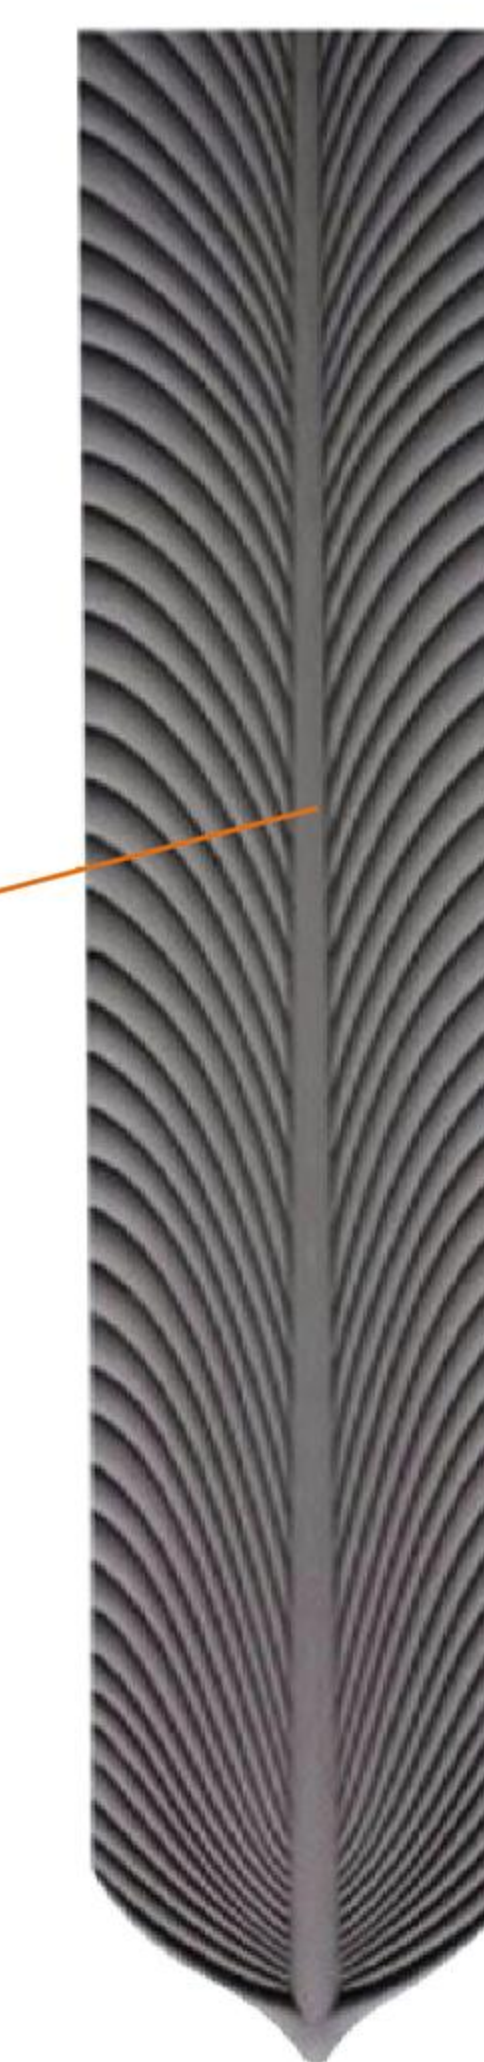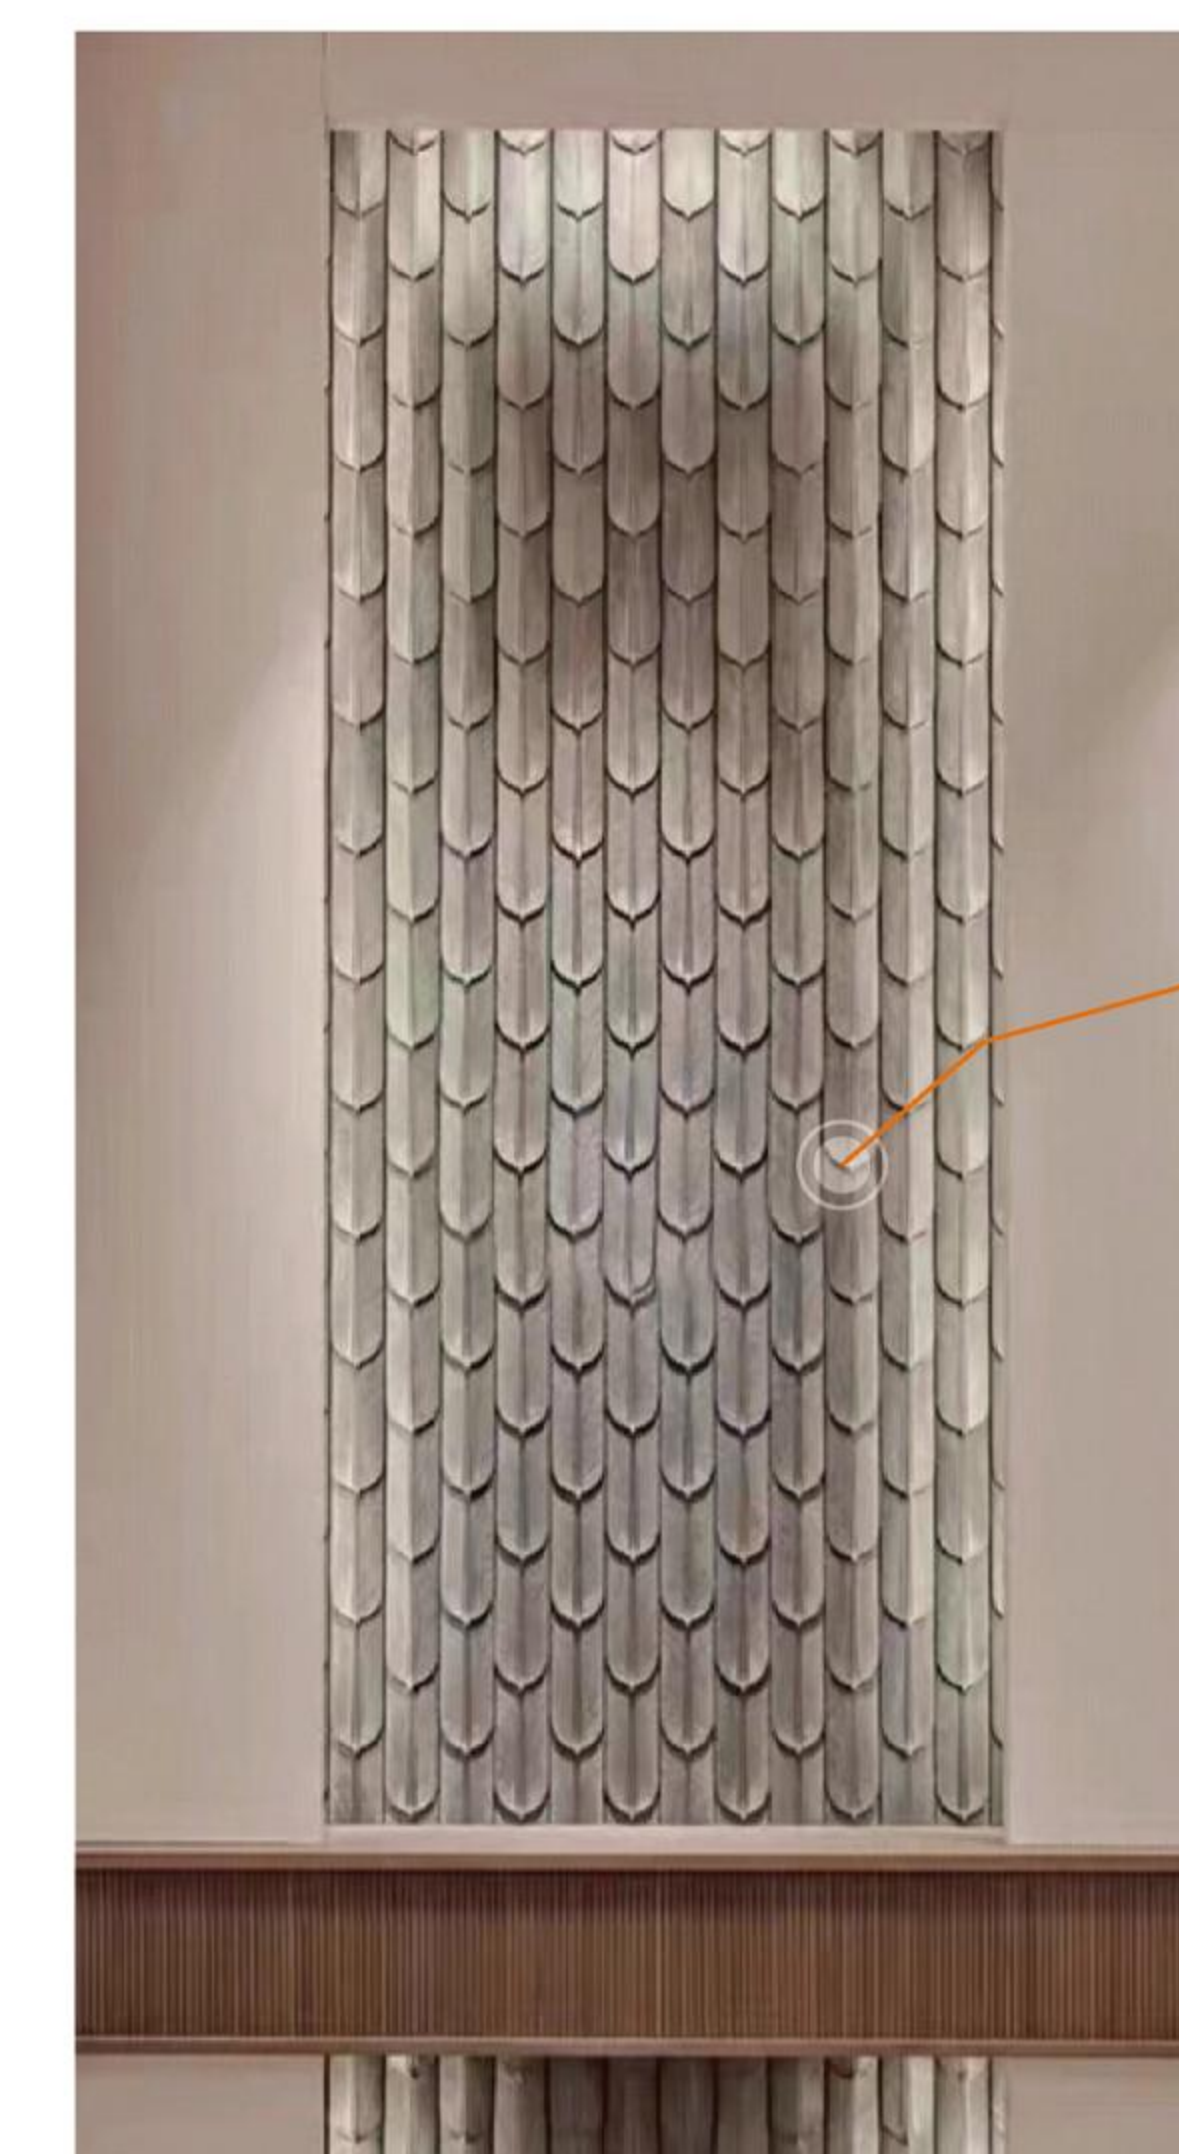

200mm

900mm

PU FEATHER STONE

Thickness: 20-50mm
900mm*200mm*40mm



◦ **Step 1**
Cutting PU Stone Panels

Based on the measurements, use a saw to cut the PU stone panels to fit the dimensions of the installation area.



◦ **Step 2**
Applying Adhesive

Evenly apply an appropriate amount of specialized adhesive to the back of the PU stone panels.



◦ **Step 3**
Installing PU Stone Panels

Ensure the installation surface is clean, flat, and dry. Carefully place the PU stone panels with adhesive onto the marked positions. Press the panels firmly to ensure they adhere tightly to the installation surface.



◦ **Step 4**
Nailing for Reinforcement

Use a nail gun to further secure the PU stone panels.

