AesthEdge



+8618953955575



angela@aesthedge.com




www.aesthedge.com



Rm1103, A10Building,Lushang Center,Guangzhou Road, Lanshan District,Linyi City,Shandong Province,China



AesthEdge

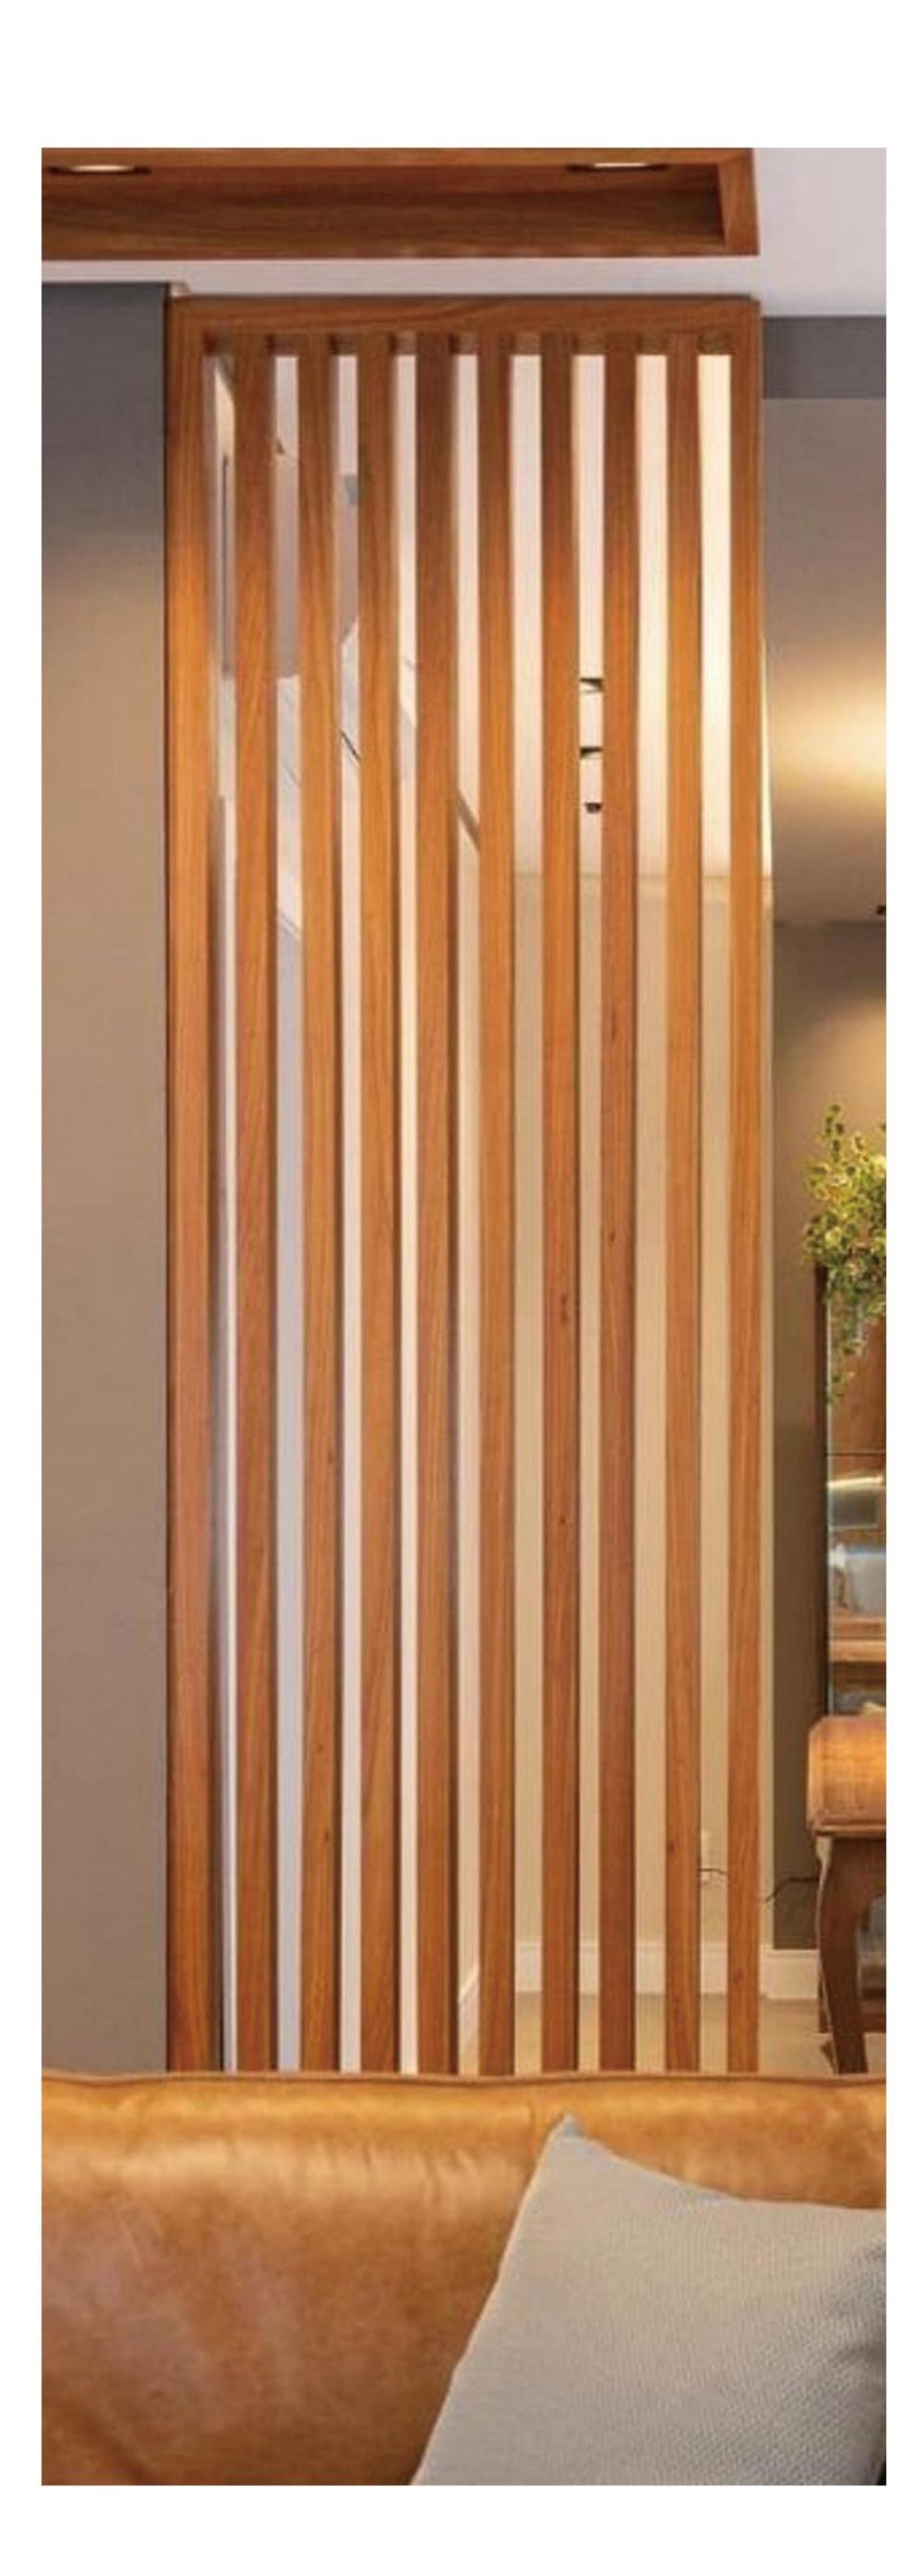










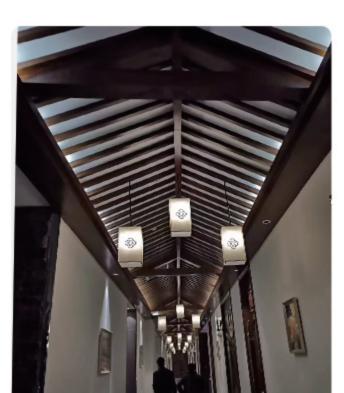


CSW4025

W 40mm

H 25mm 2900mm




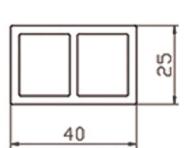

CSW7550 W 75mm

H 50mm L 2900mm




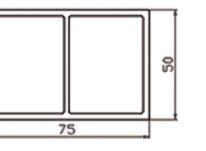


CSW5025

W 50mm

H 25mm L 2900mm

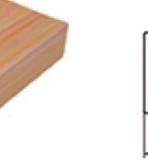

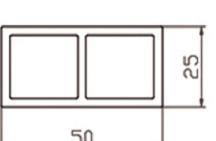


CSW10050

W 100mm H 50mm

L 2900mm



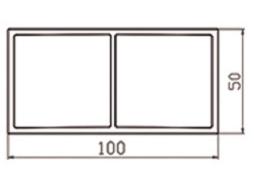


CSW5040

W 50mm


H 40mm L 2900mm




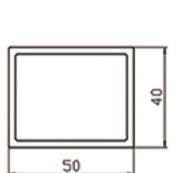

CSW10050

W 100mm



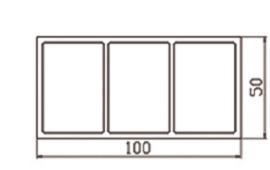


CSW5050

W 50mm

H 50mm L 2900mm



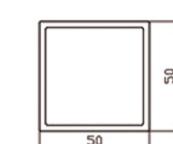


CSW100100

W 100mm

H 100mm L 2900mm



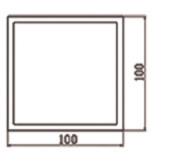


CSW6525

W 65mm

H 25mm



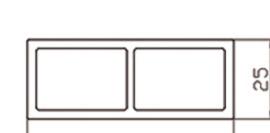


CSW15050

W 150mm

H 50mm

L 2900mm



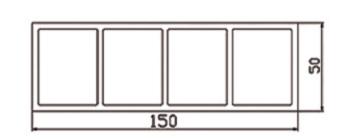

Installation



timber tube and put glue in.



2.Insert the wooden block 1 which is 5cm in both ends of WPC timber tube.



3.Put glue on both ends of the wooden block 1 for WPC timber tube.







4.Fix wooden block 2 on position of the ceiling floor by glue, and then put the WPC square tube on the position of wooden block 2, then finish.

